








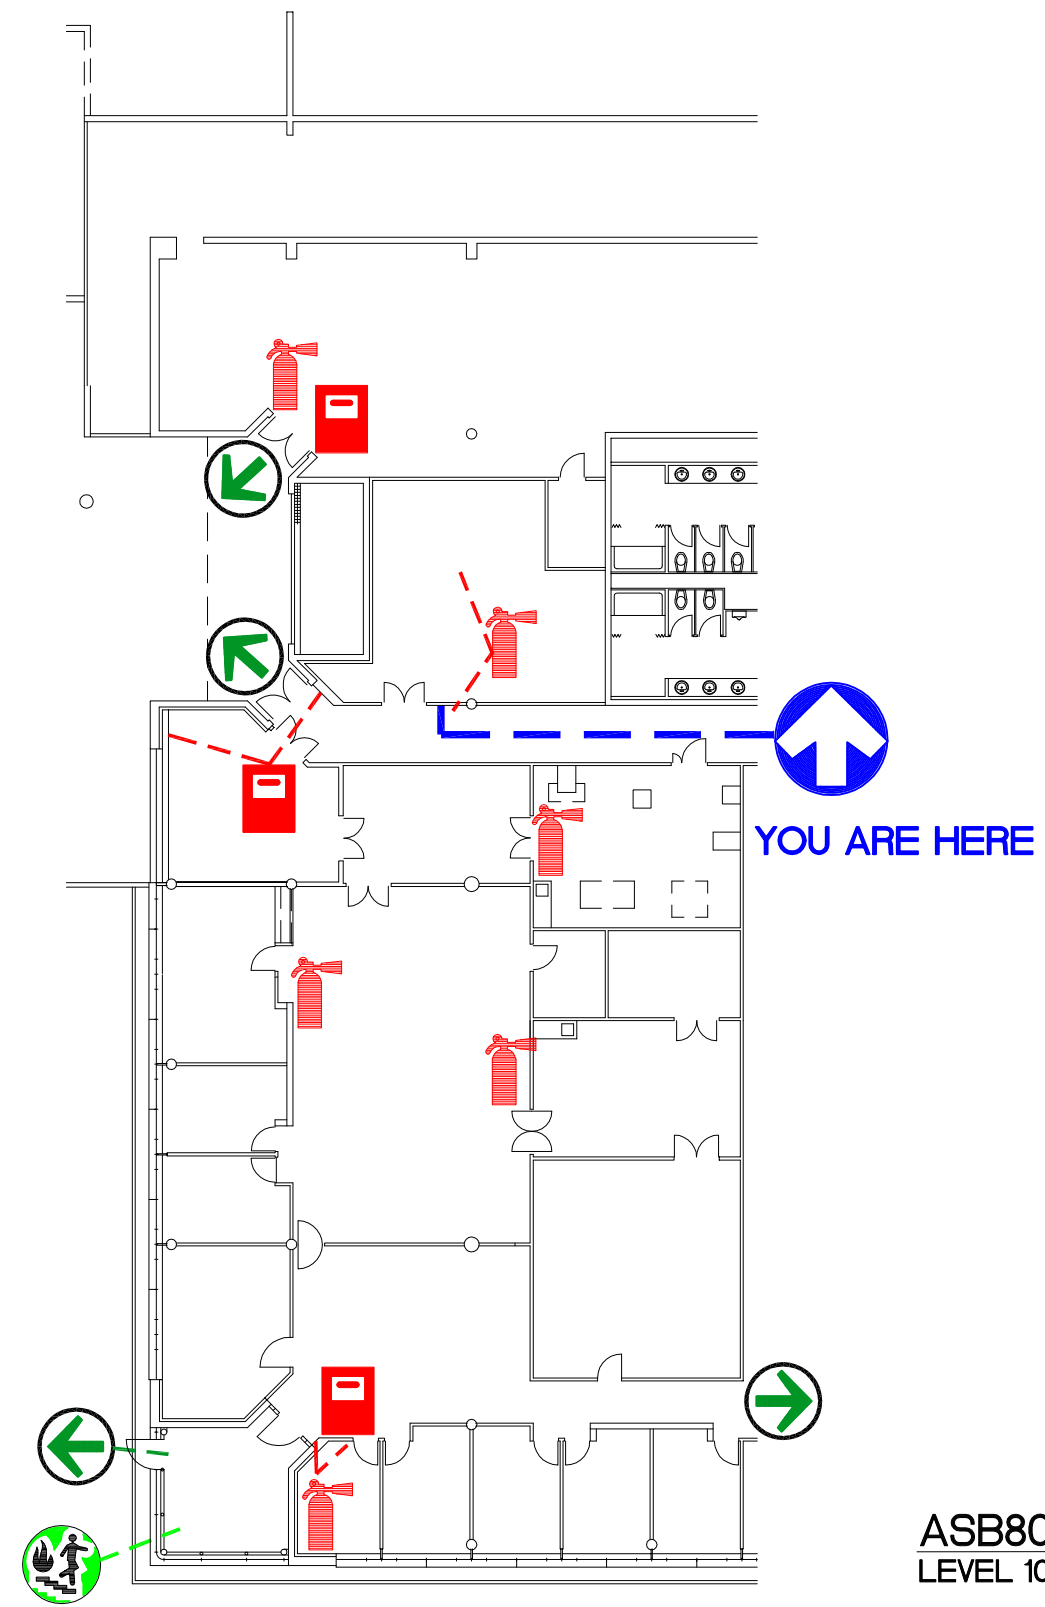
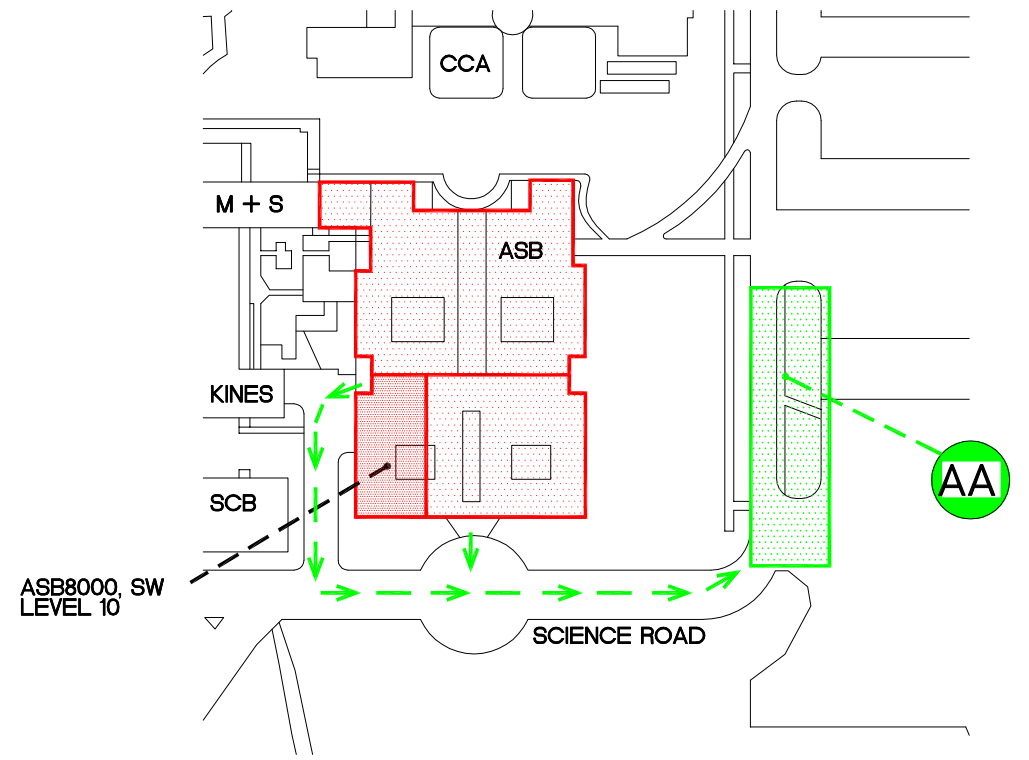


LEGEND


-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA
-  SPRINKLER SHUT OFF



ASB8000 FLOOR PLAN (SW)
LEVEL 10
NTS




EVACUATION PLAN
NTS


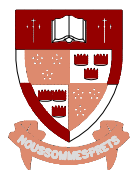


SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP03808SW_1.DWG

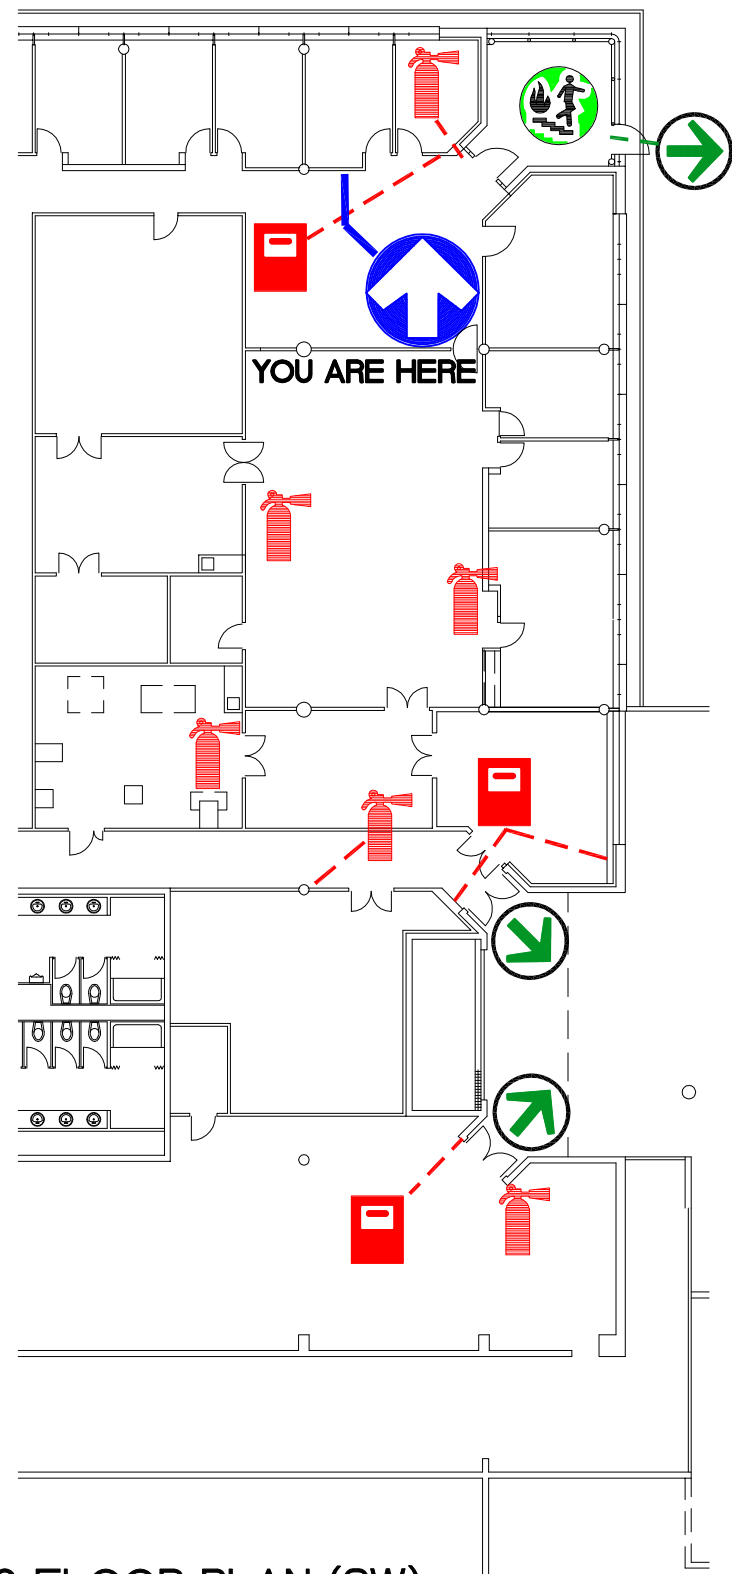


ASB8000 FLOOR PLAN (SW)
LEVEL 10 NTS

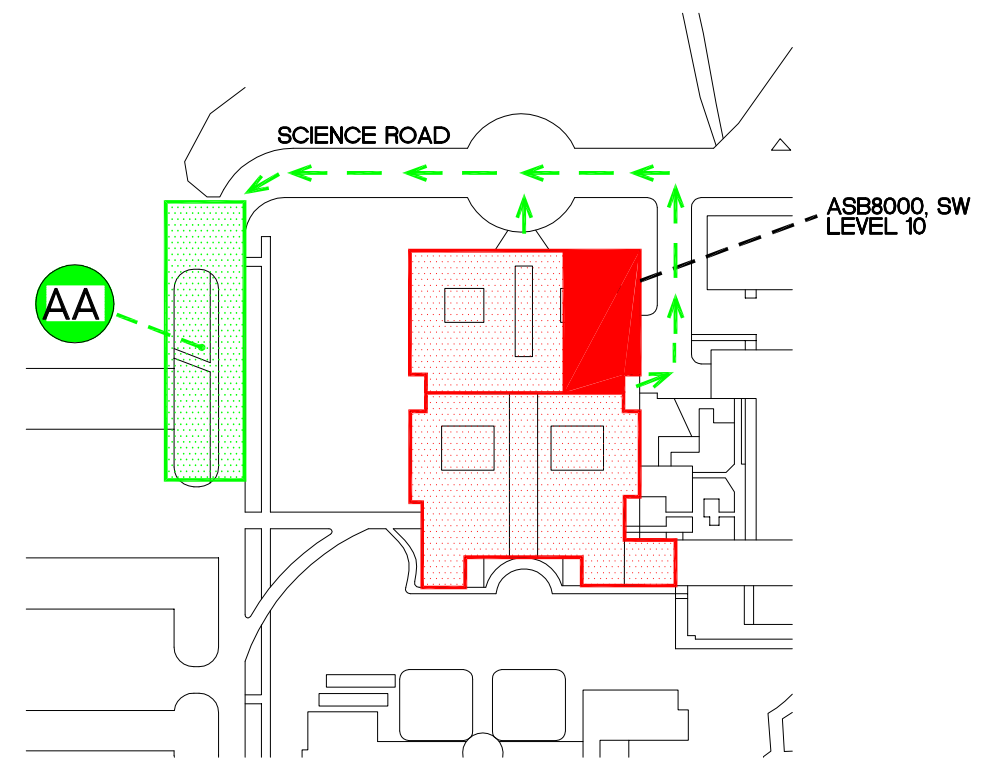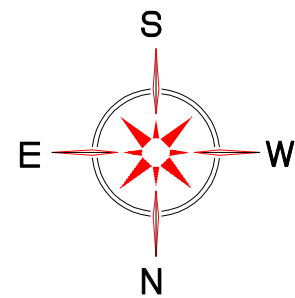

EVACUATION PLAN
NOT TO SCALE


LEGEND

- | | | | |
|--|-------------------|--|--------------------|
| | YOU ARE HERE | | FIRE STAIRS |
| | EXIT POINT | | EVACUATION ROUTE |
| | FIRE EXTINGUISHER | | ASSEMBLY AREA |
| | FIRE HOSE | | SPRINKLER SHUT OFF |
| | FIRE PULL STATION | | |

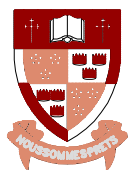





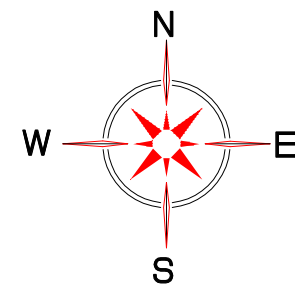




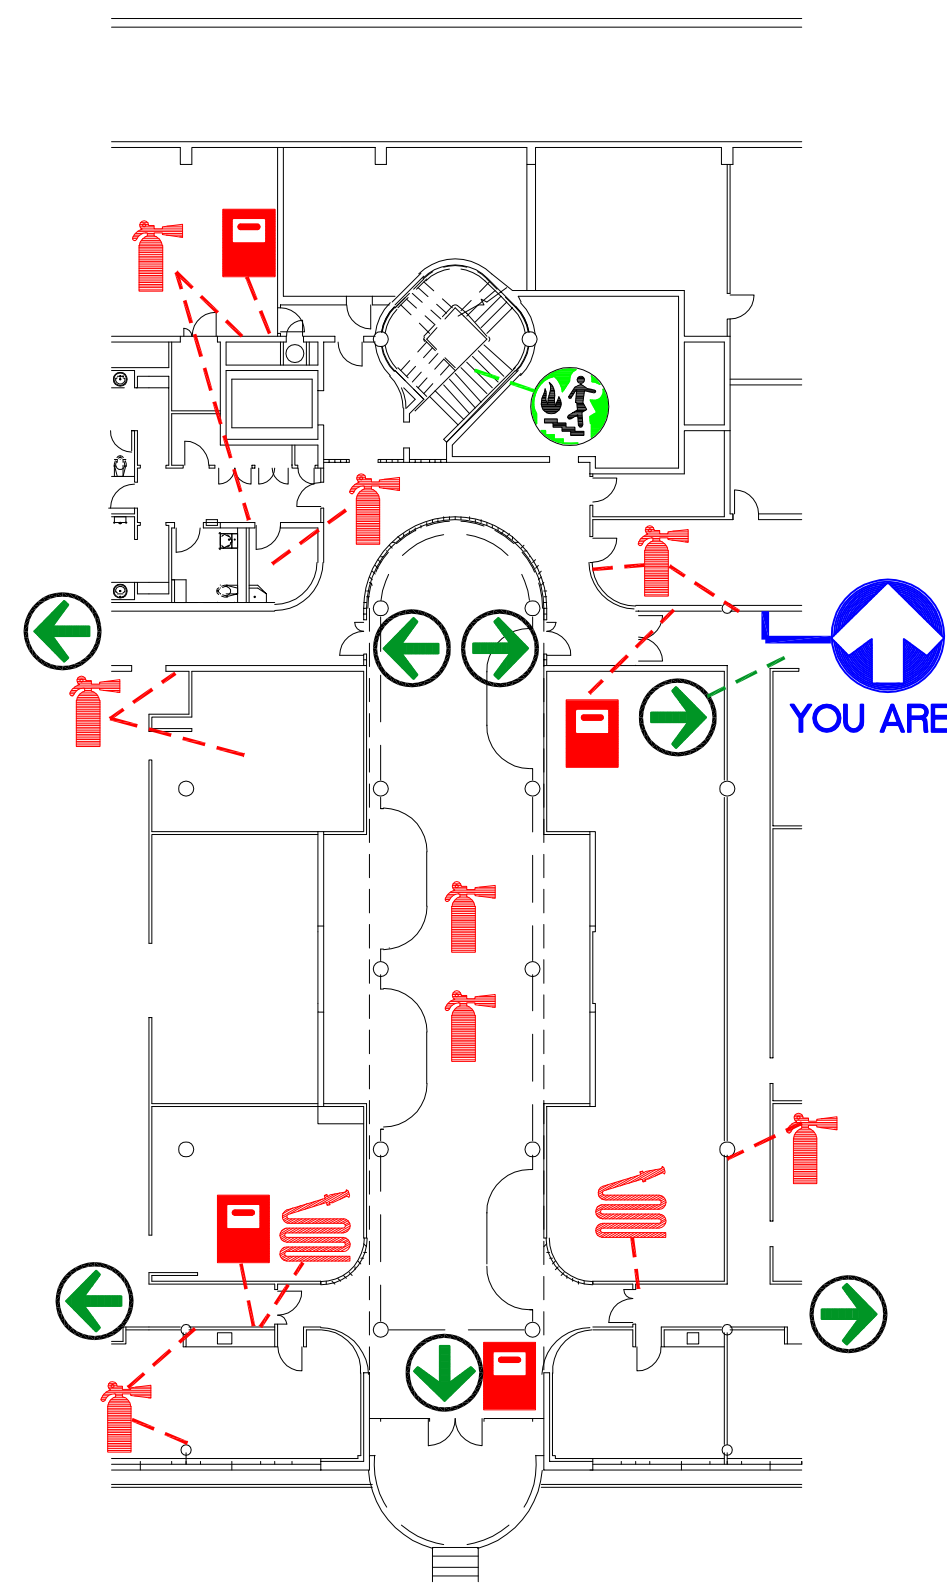
SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP03808SW_2.DWG




LEGEND

-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA
-  SPRINKLER SHUT OFF



ASB8000 FLOOR PLAN (SC)
LEVEL 10 NTS



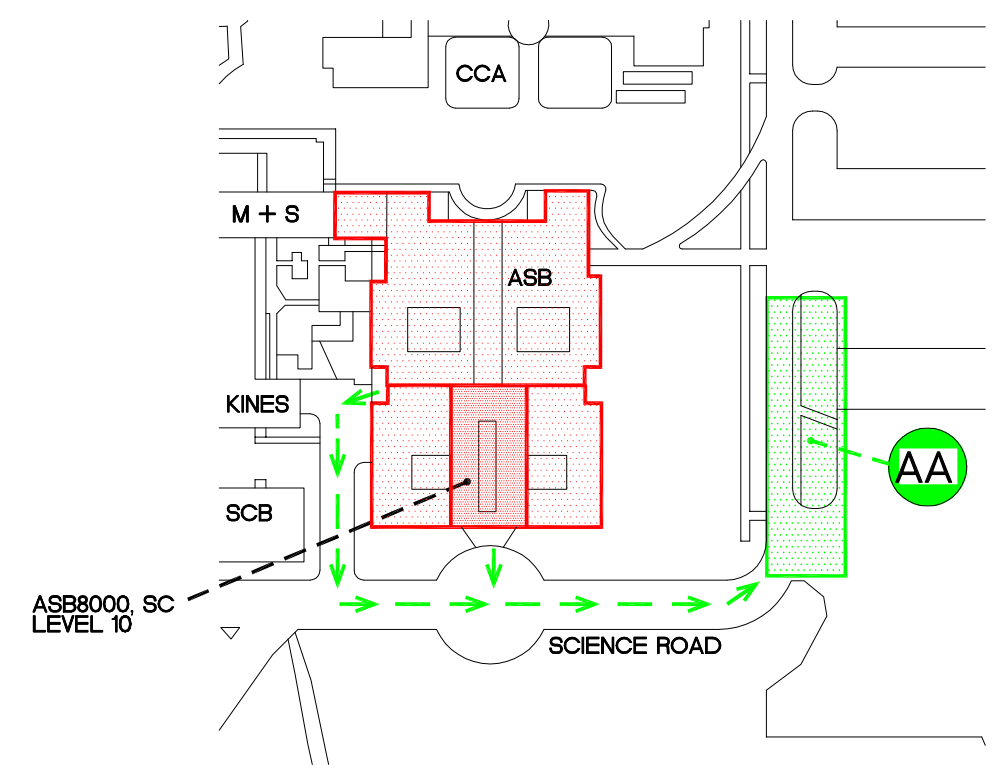


EVACUATION PLAN
NTS



SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP03808SC_3.DWG

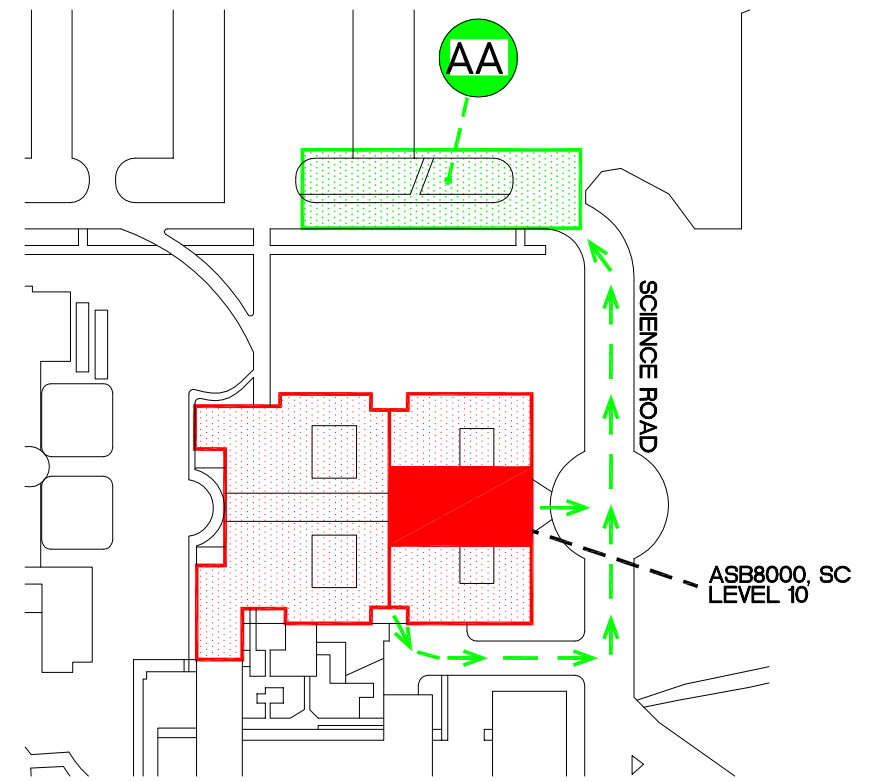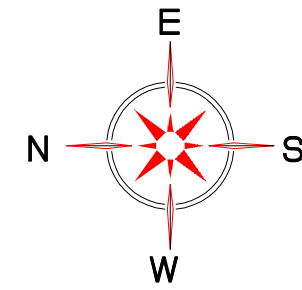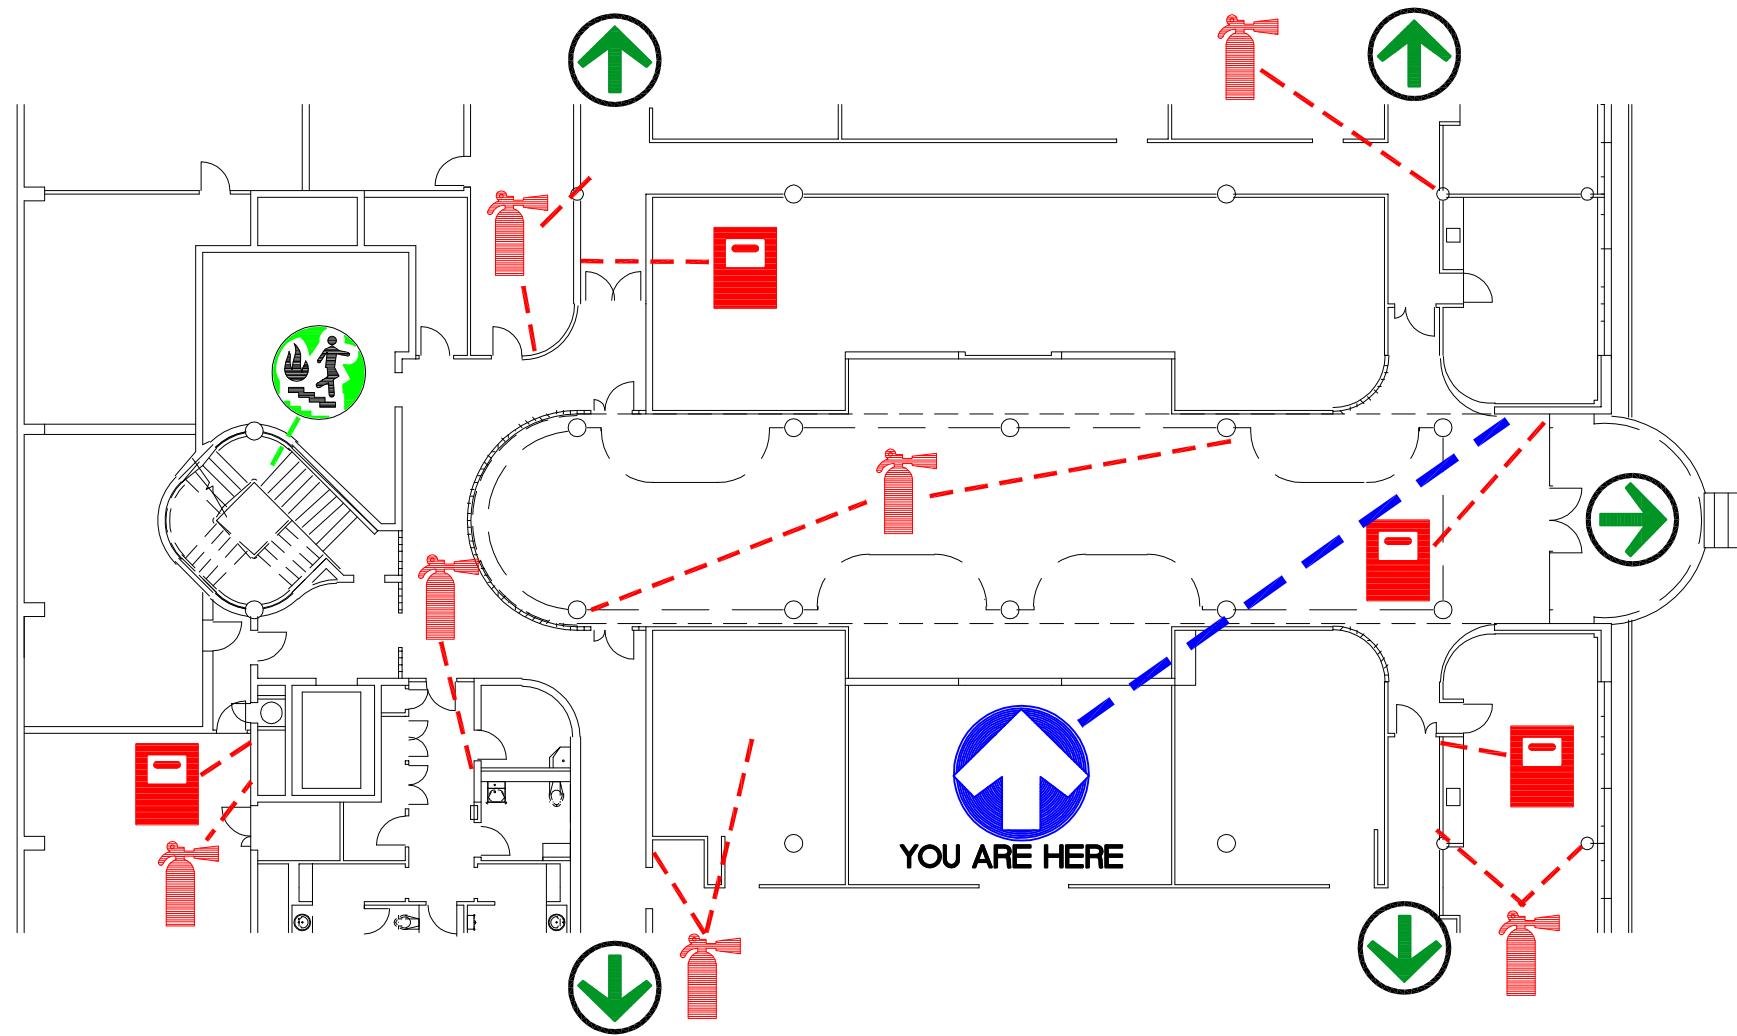


ASB8000 FLOOR PLAN (SC)
LEVEL 10
NTS

EVACUATION PLAN
NOT TO SCALE

LEGEND



- | | | | | | |
|--|-------------------|--|-------------------|--|--------------------|
| | YOU ARE HERE | | FIRE HOSE | | EVACUATION ROUTE |
| | EXIT POINT | | FIRE PULL STATION | | ASSEMBLY AREA |
| | FIRE EXTINGUISHER | | FIRE STAIRS | | SPRINKLER SHUT OFF |

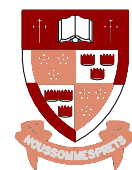


**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**

SFUDWGS\EVACPLAN\EP03808SC_4.DWG

00-01-13

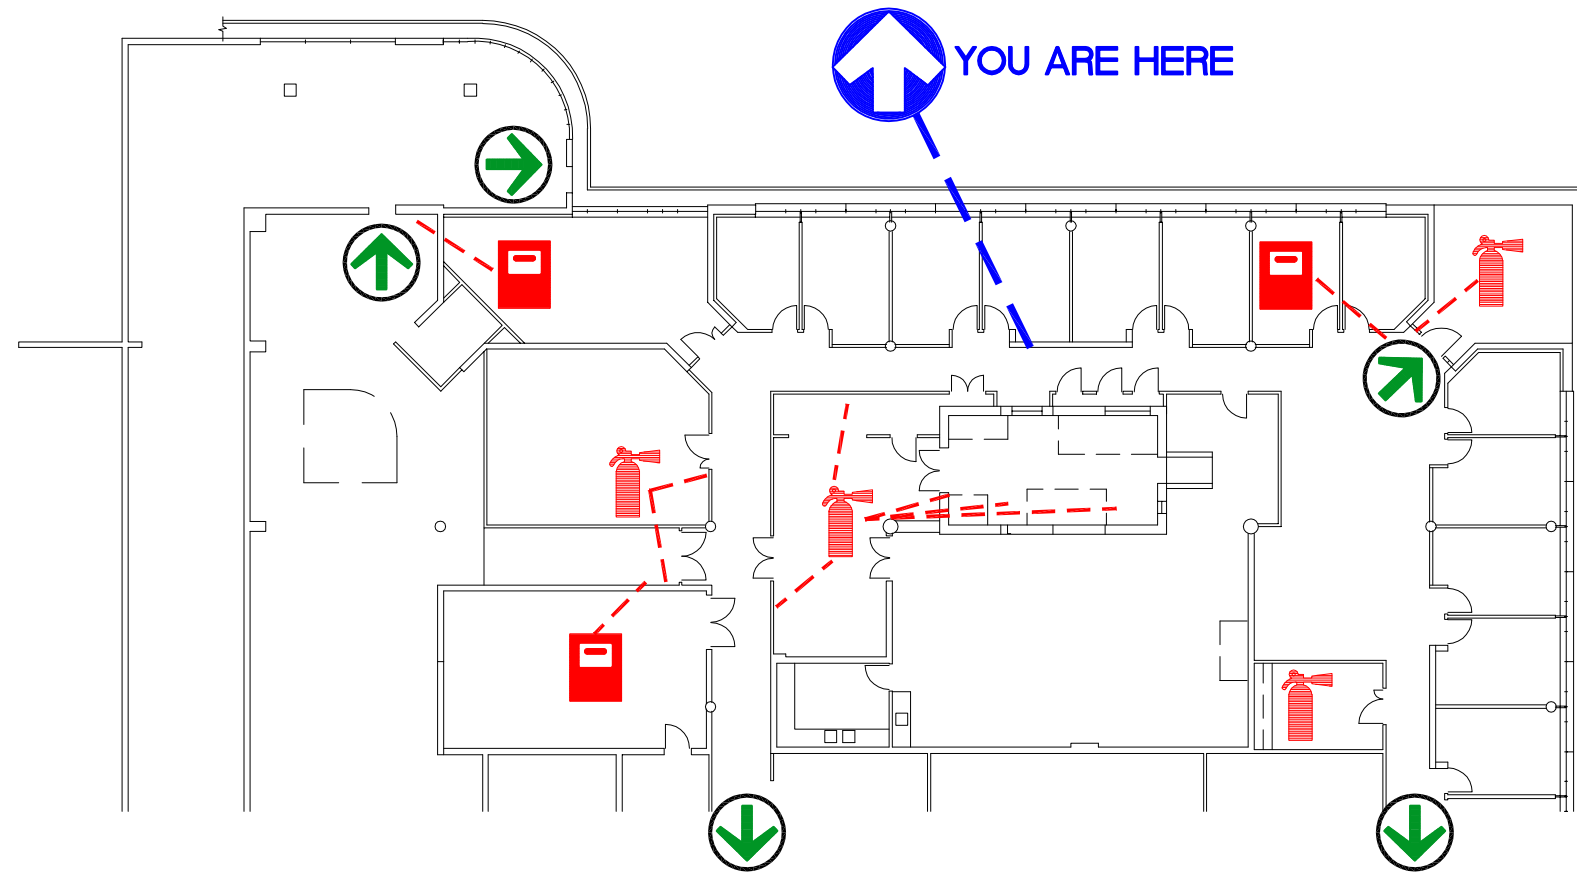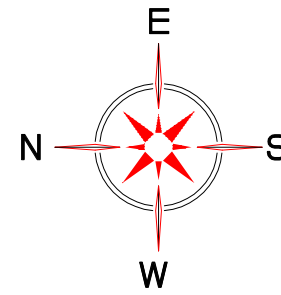



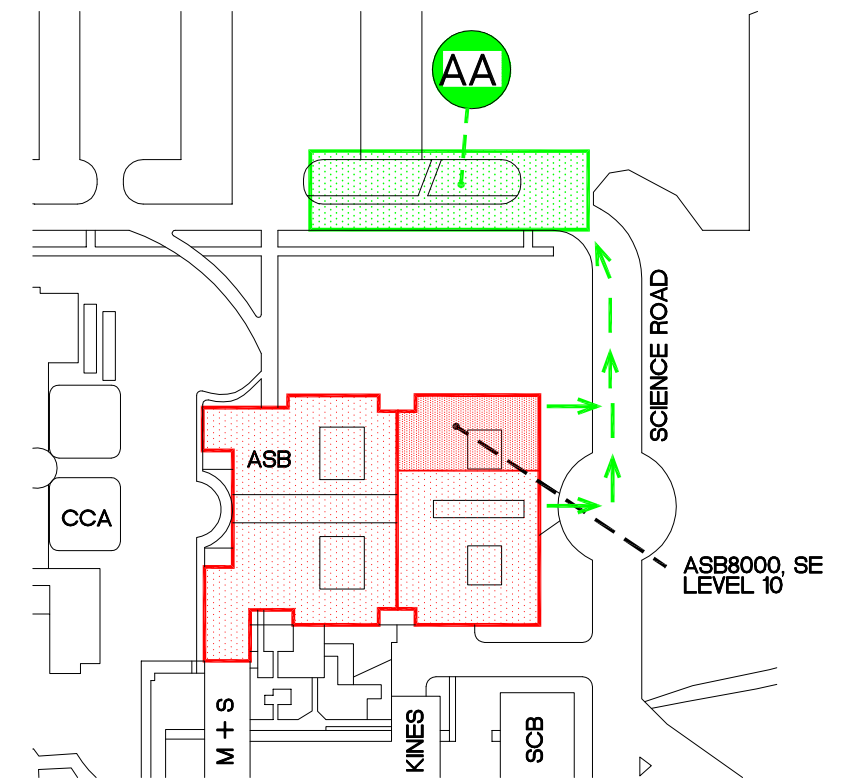






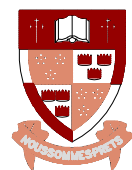
ASB8000 FLOOR PLAN (SE)
LEVEL 10
NTS



EVACUATION PLAN
NTS




LEGEND

-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA
-  SPRINKLER SHUT OFF



SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP03808SE_5.DWG

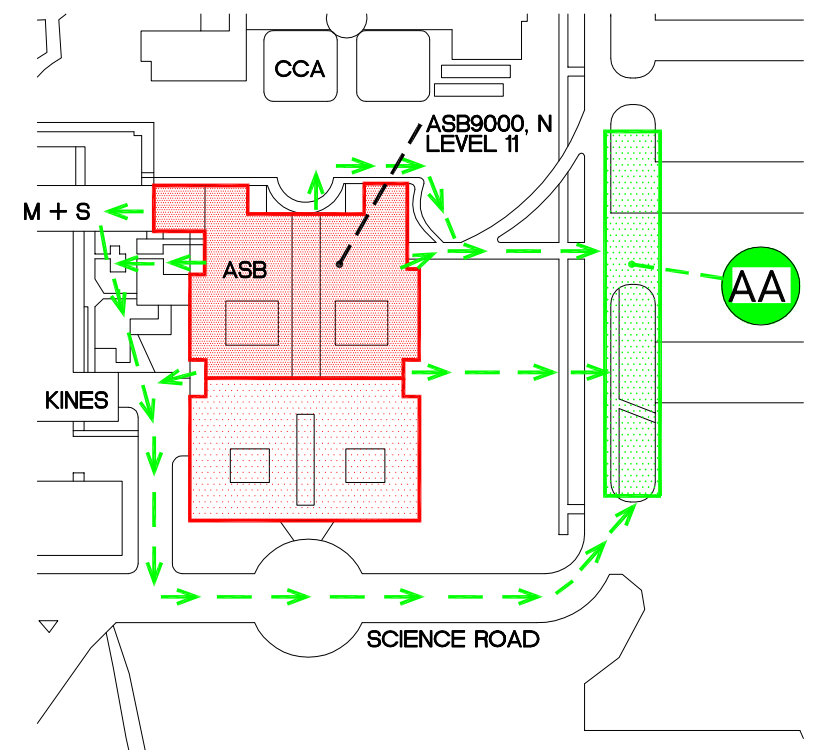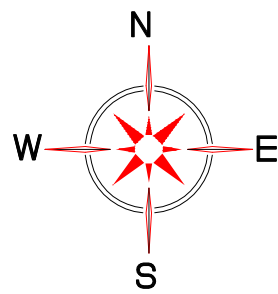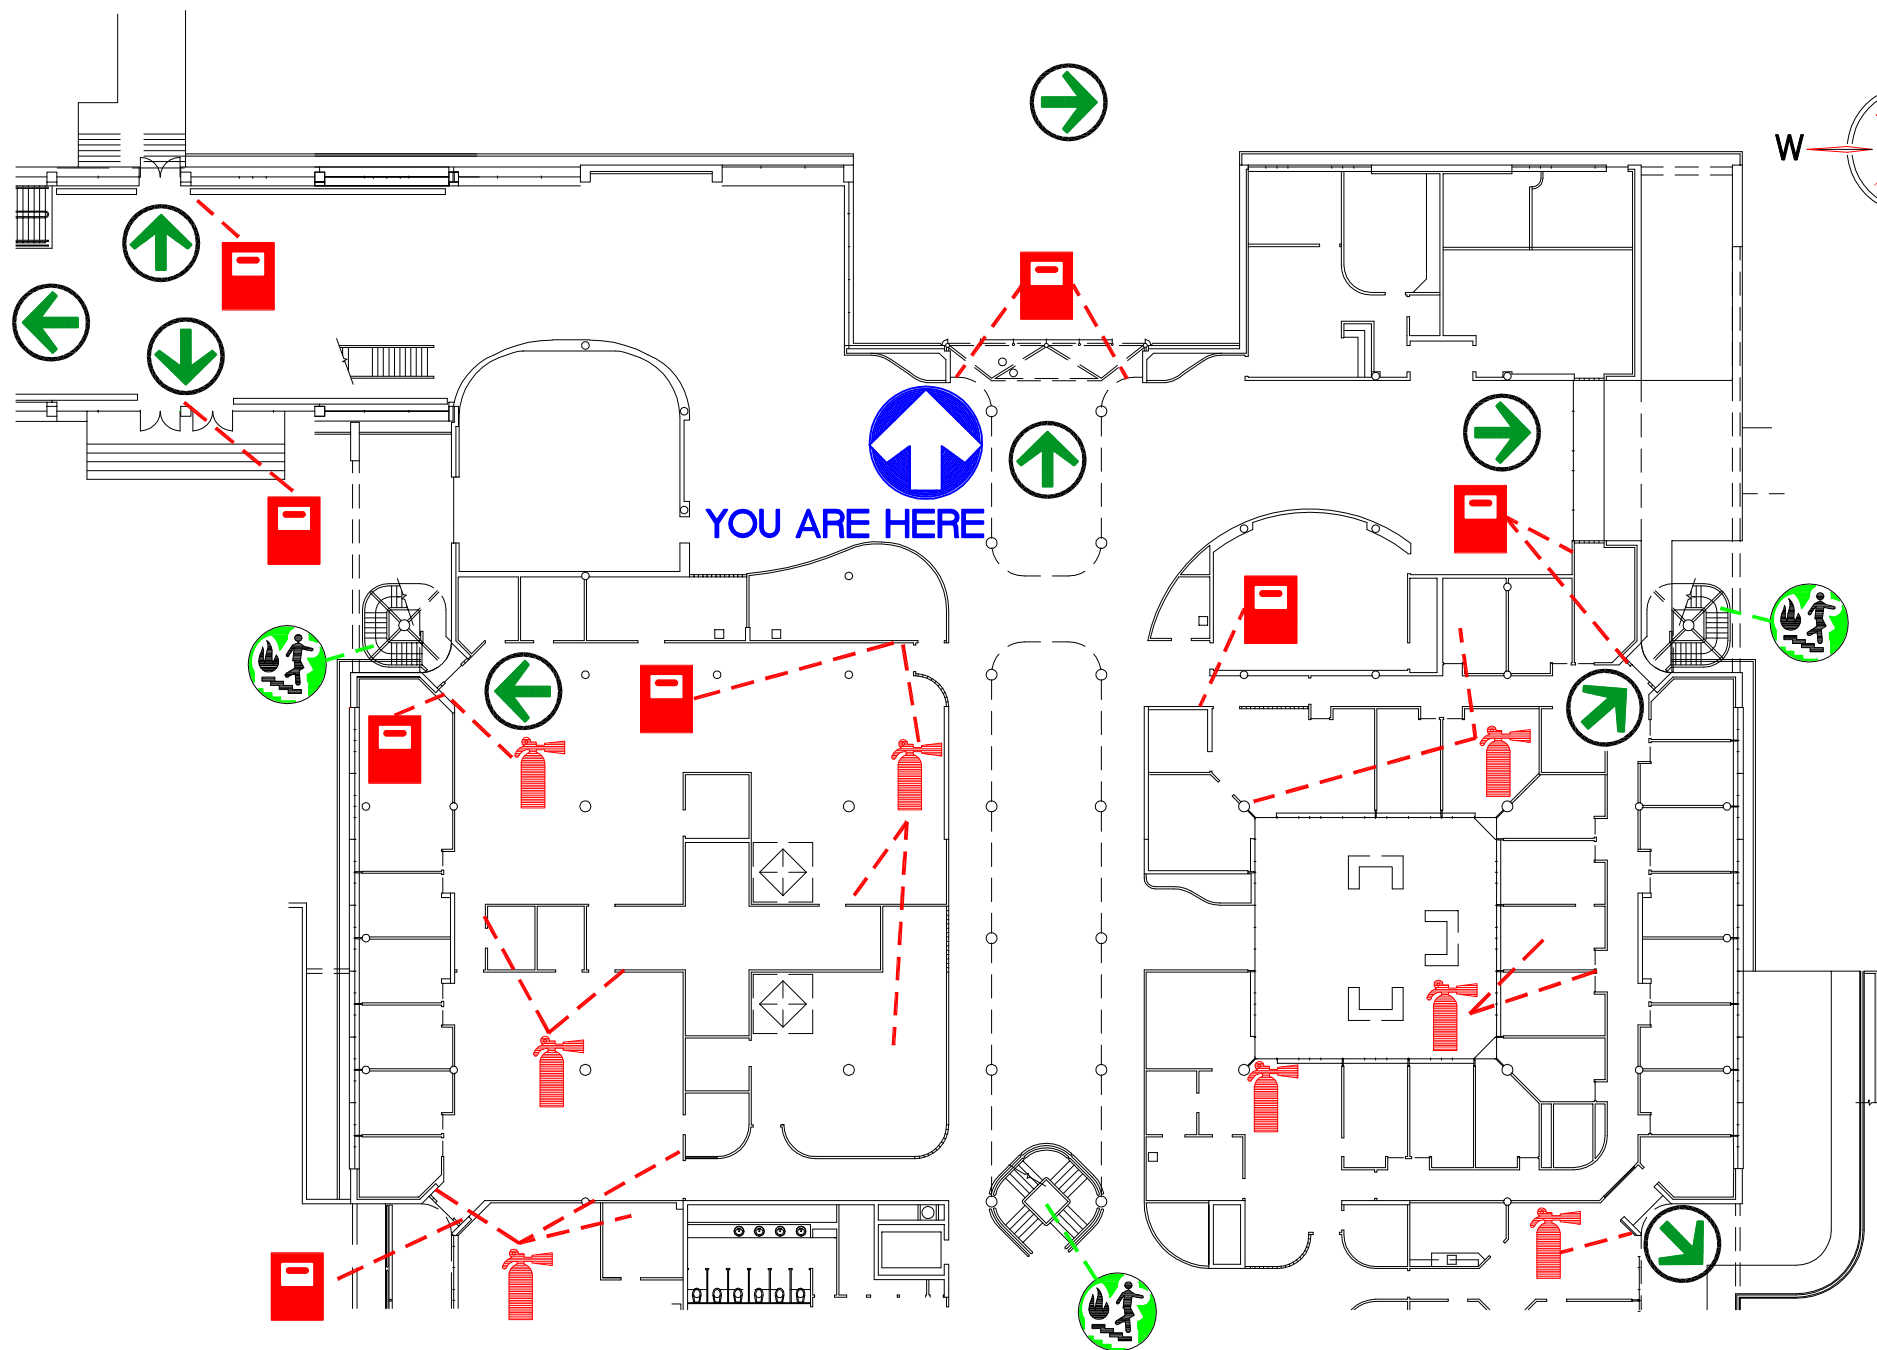


ASB9000 FLOOR PLAN (NORTH)
LEVEL 11
NTS

EVACUATION PLAN
NTS




LEGEND

- YOU ARE HERE
- EXIT POINT
- FIRE EXTINGUISHER
- FIRE HOSE
- SPRINKLER SHUT OFF
- FIRE PULL STATION
- FIRE STAIRS
- EVACUATION ROUTE
- ASSEMBLY AREA

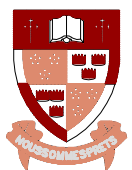

SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING


SFUDWGS\EVACPLAN\EP038090N_1.DWG

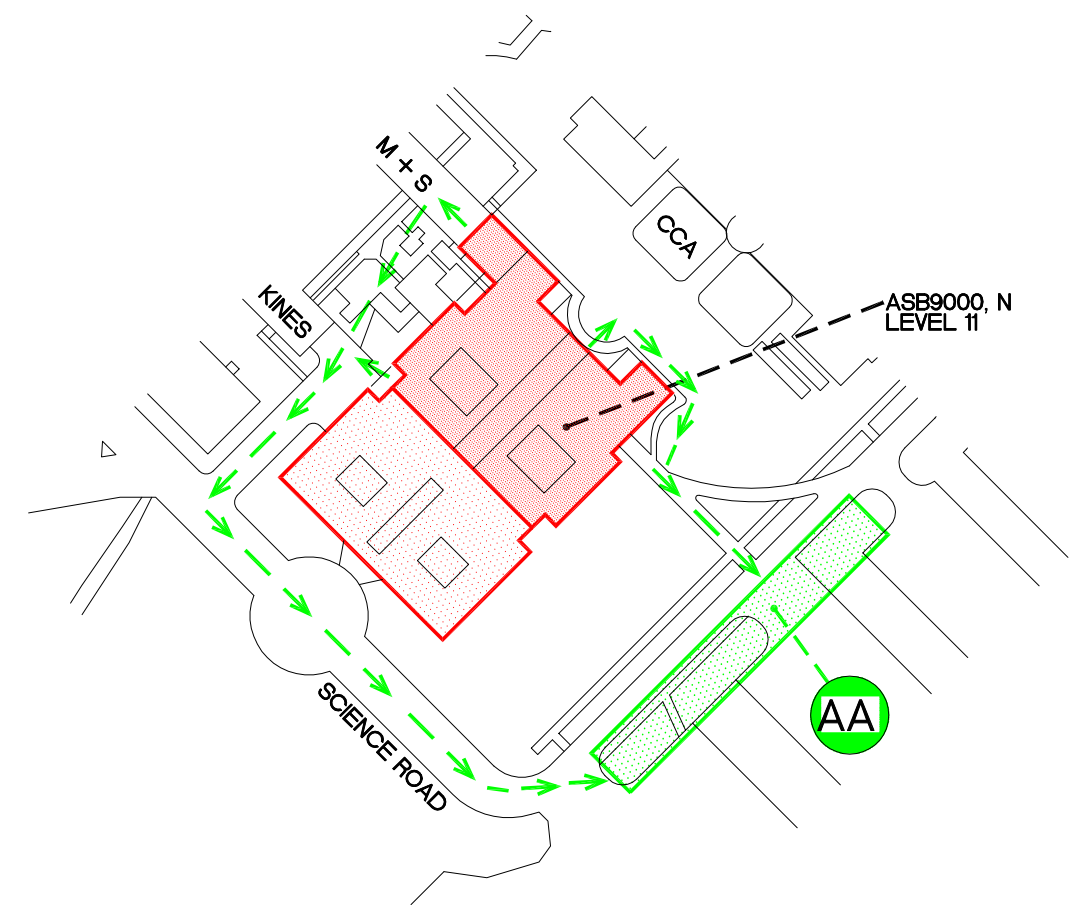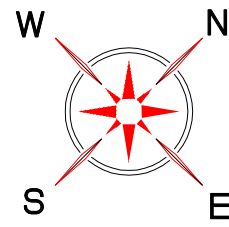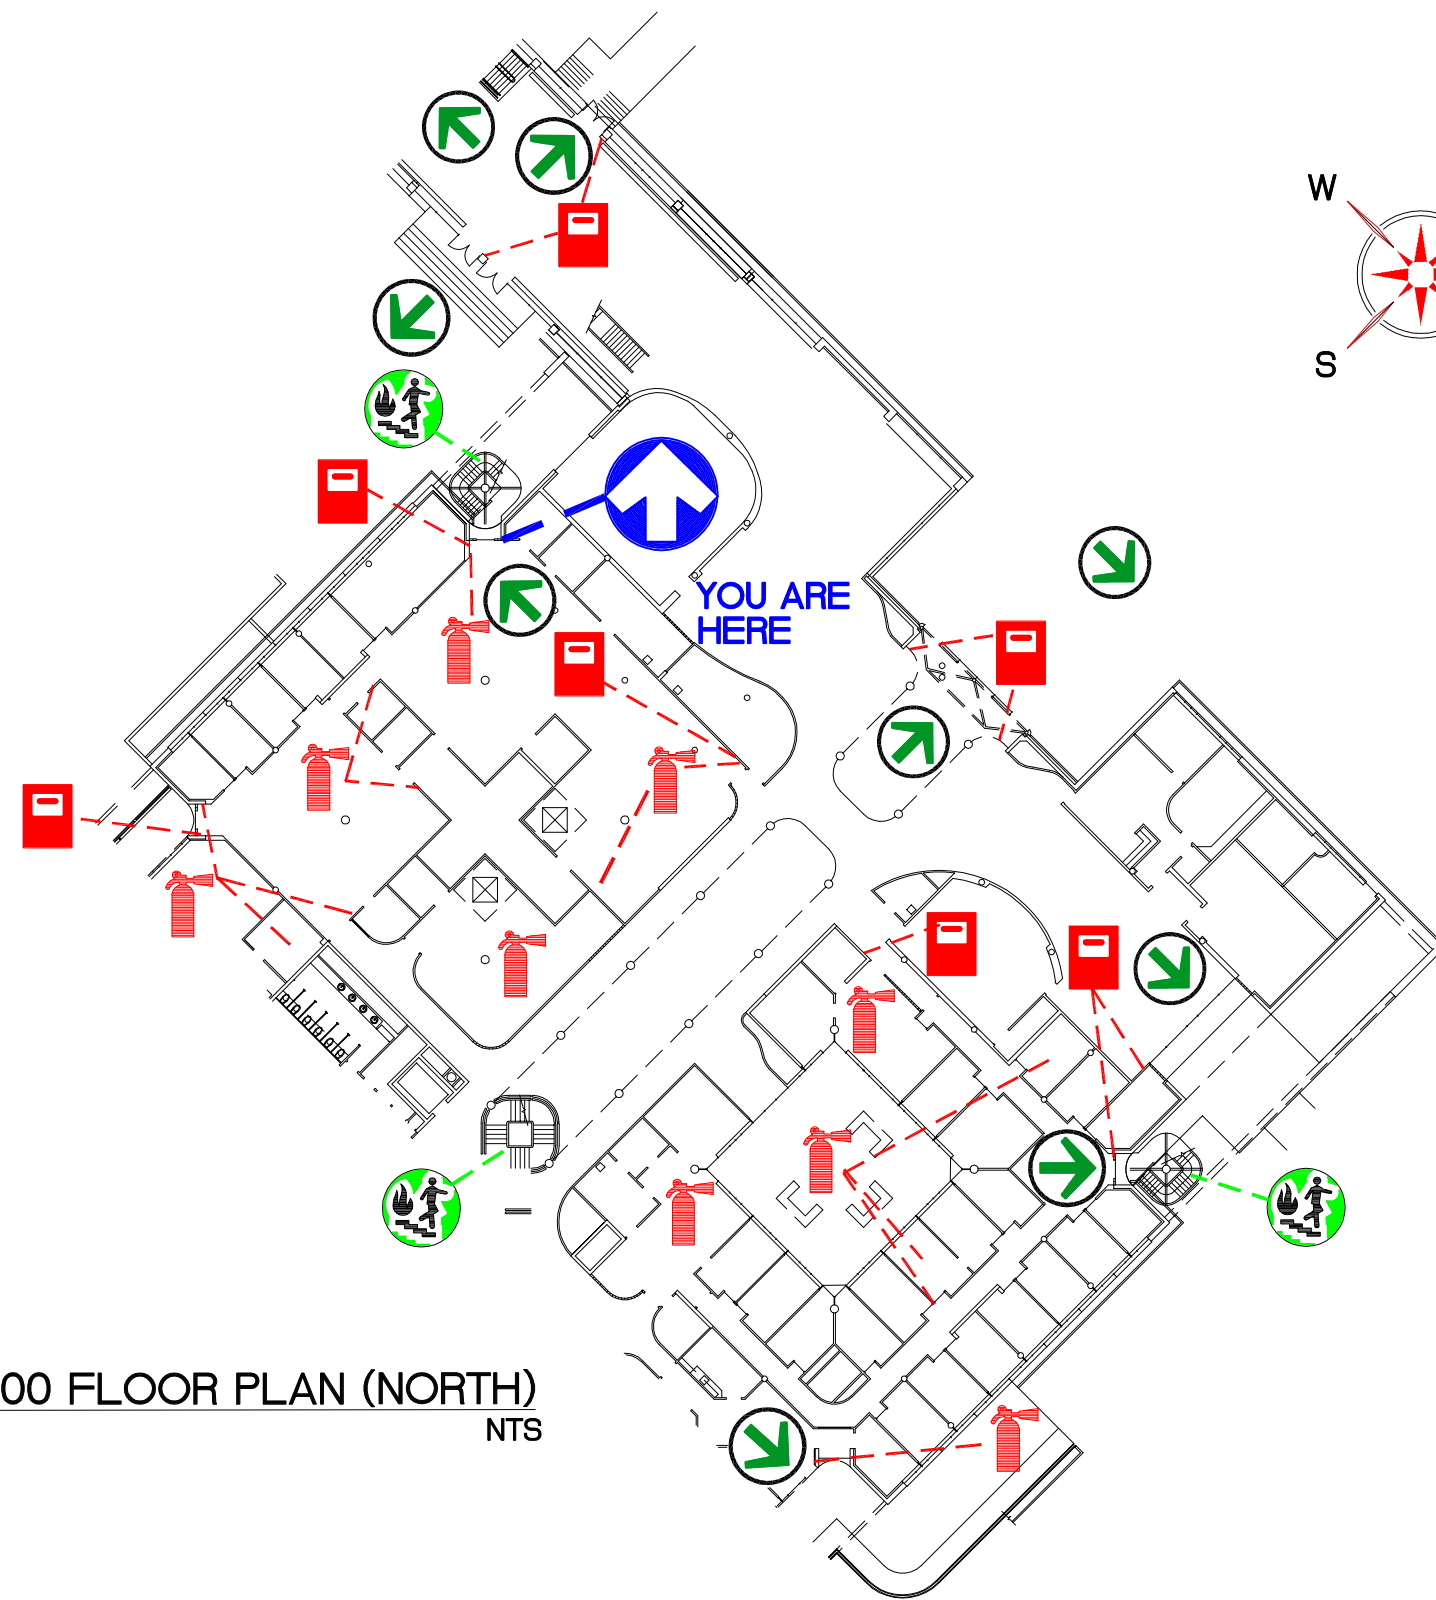

EVACUATION PLAN
NTS

LEGEND



- | | | | |
|--|--------------------|--|-------------------|
| | YOU ARE HERE | | FIRE PULL STATION |
| | EXIT POINT | | FIRE STAIRS |
| | FIRE EXTINGUISHER | | EVACUATION ROUTE |
| | FIRE HOSE | | ASSEMBLY AREA |
| | SPRINKLER SHUT OFF | | |

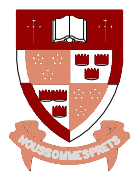

SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP038090N_2.DWG

YOU ARE HERE

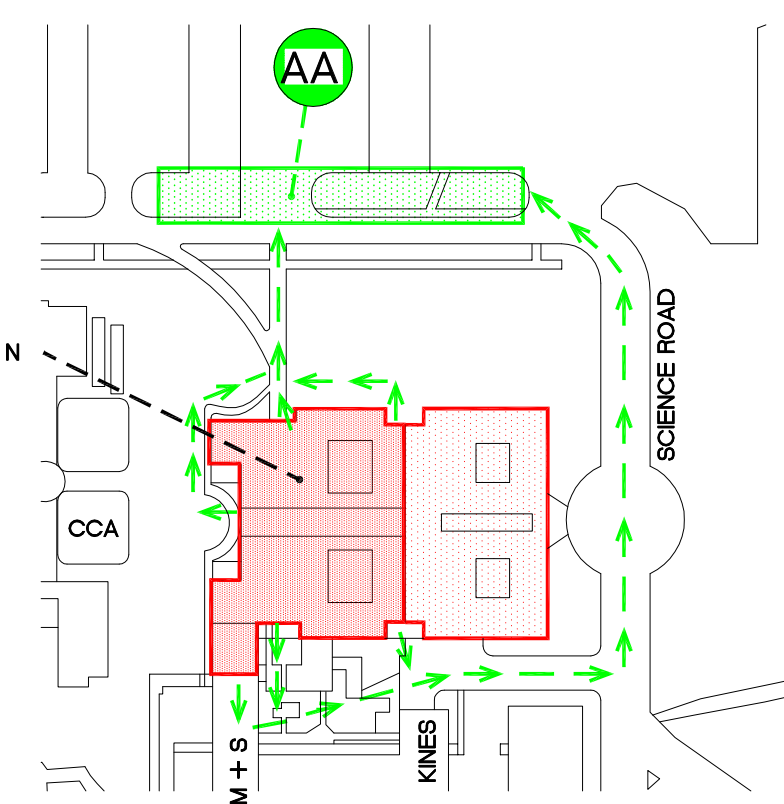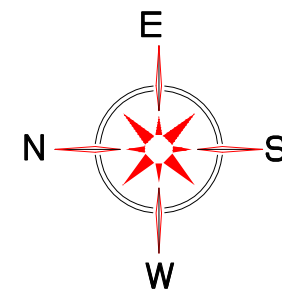

ASB9000 FLOOR PLAN (NORTH)
LEVEL 11
NTS

EVACUATION PLAN
NTS

LEGEND



YOU ARE HERE



EXIT POINT



FIRE EXTINGUISHER



FIRE HOSE




SPRINKLER SHUT OFF



FIRE PULL STATION






FIRE STAIRS

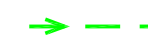

EVACUATION ROUTE




ASSEMBLY AREA

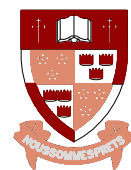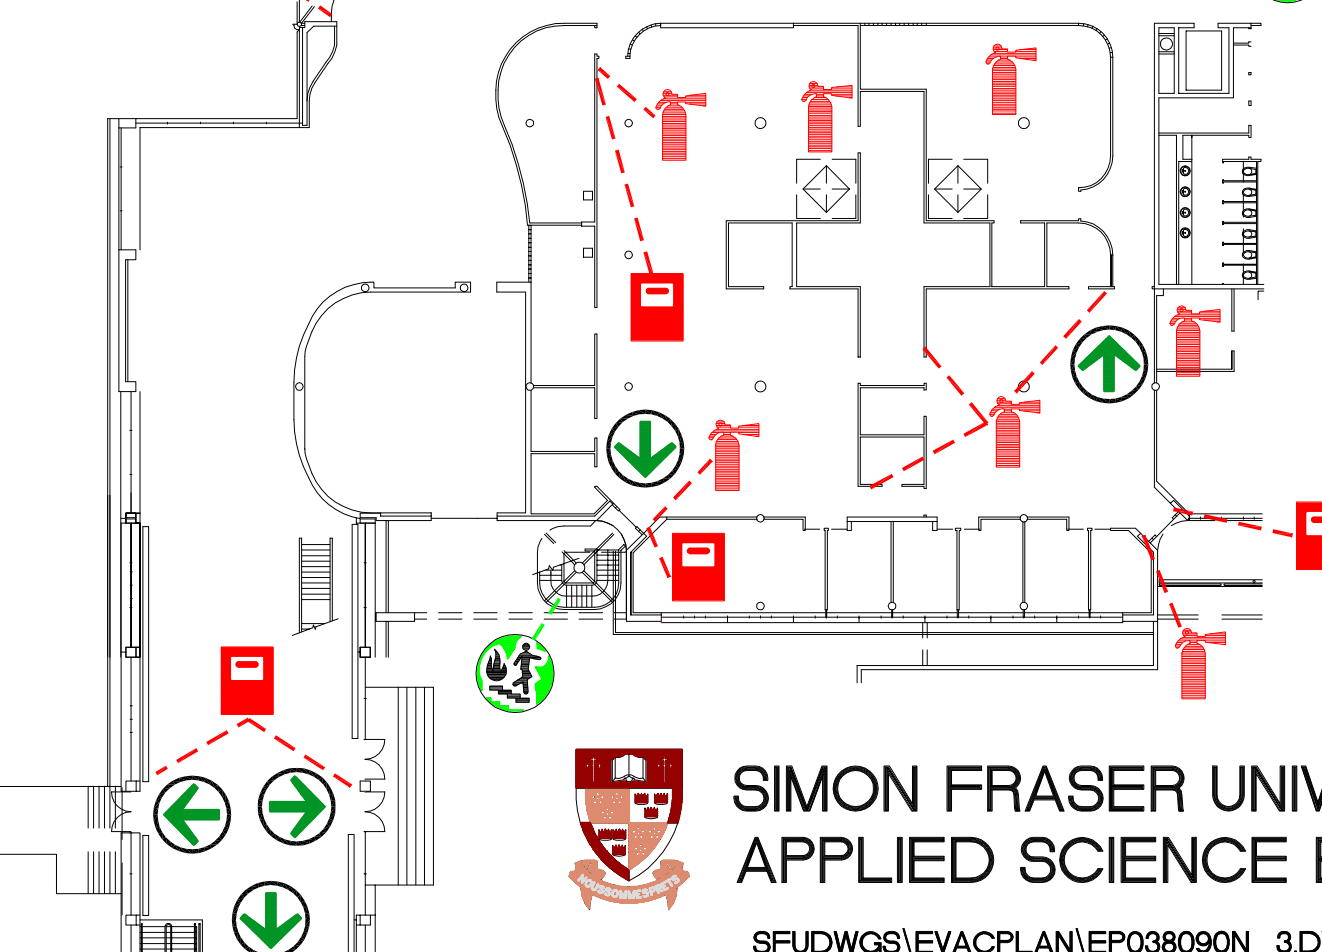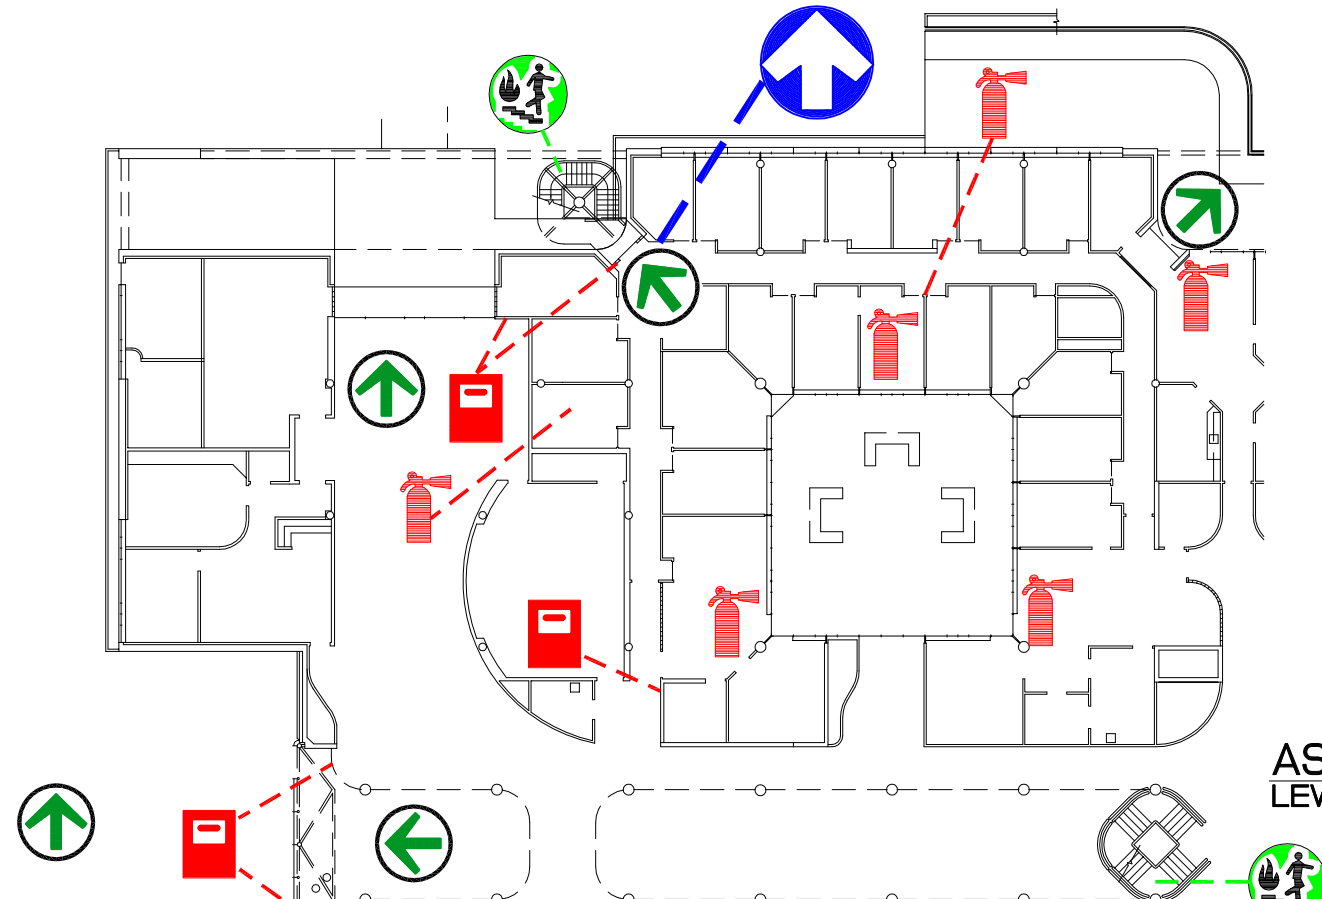


SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP038090N_3.DWG

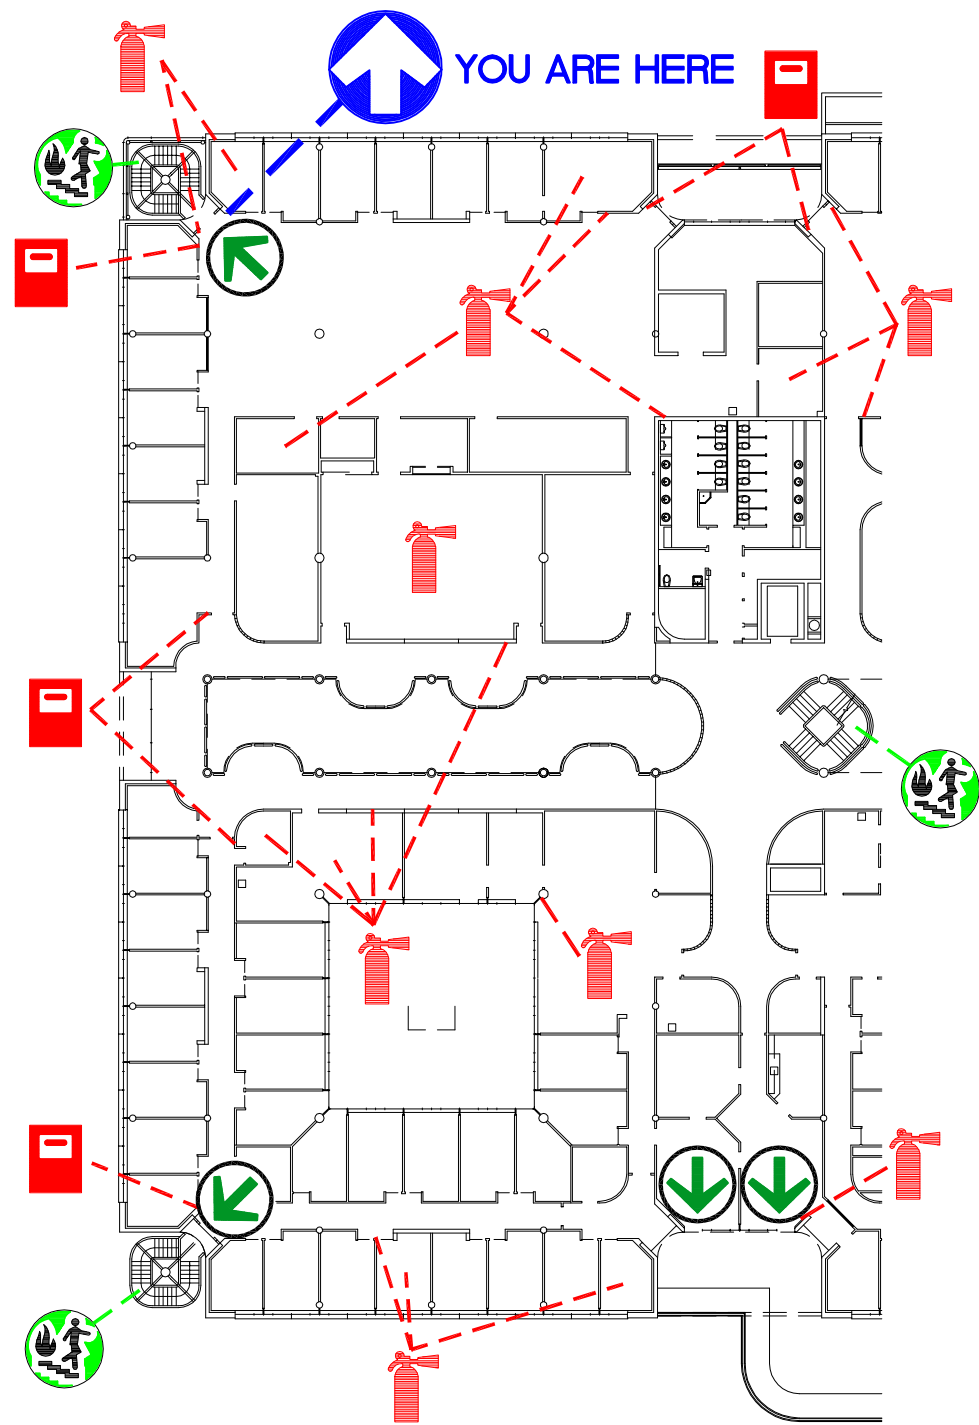



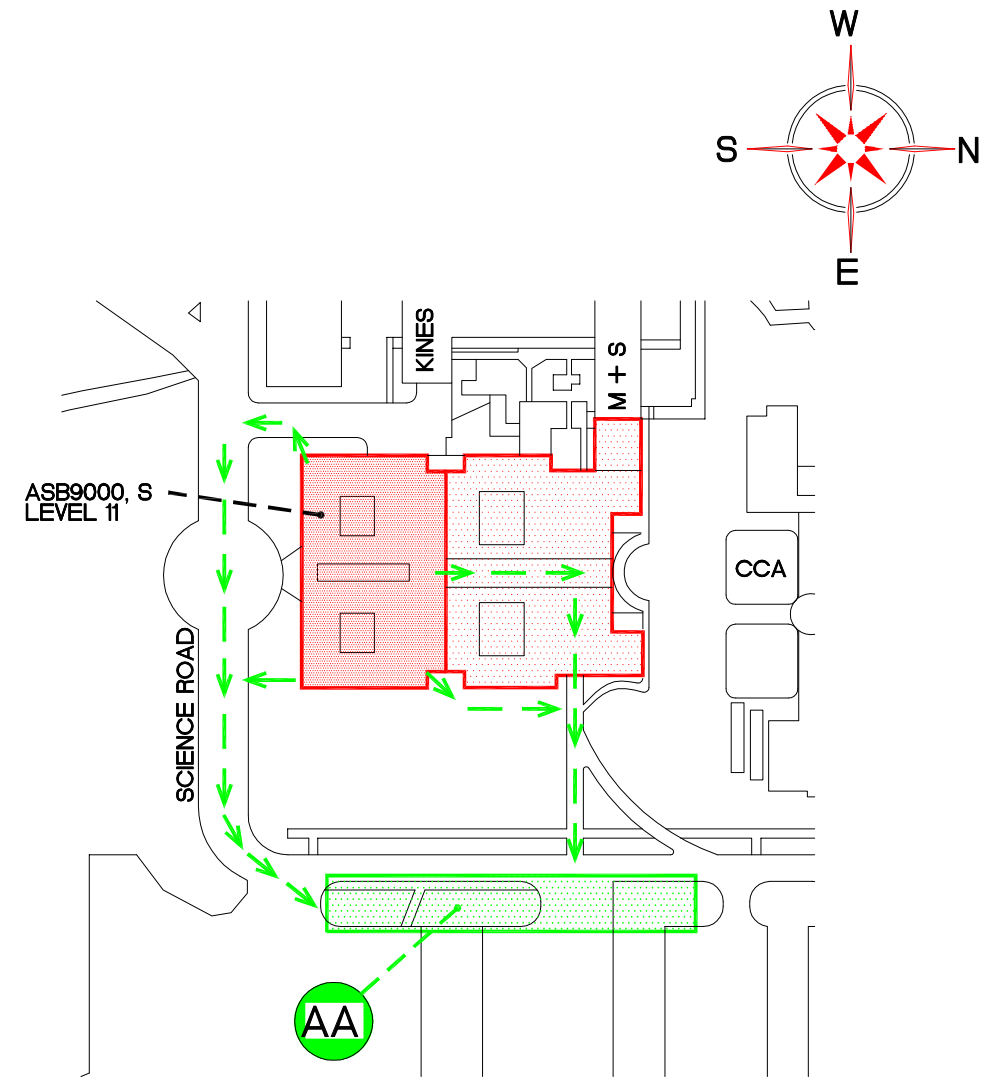

ASB9000 FLOOR PLAN (SOUTH)
LEVEL 11
NTS




EVACUATION PLAN
NTS

LEGEND


-  YOU ARE HERE
-  EXIT POINT
-  FIRE PULL STATION
-  FIRE EXTINGUISHER

-  FIRE HOSE
-  FIRE STAIRS
-  ASSEMBLY AREA
-  EVACUATION ROUTE

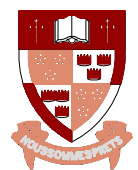


**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**

SFUDWGS\EVACPLAN\EP038090S_4.DWG

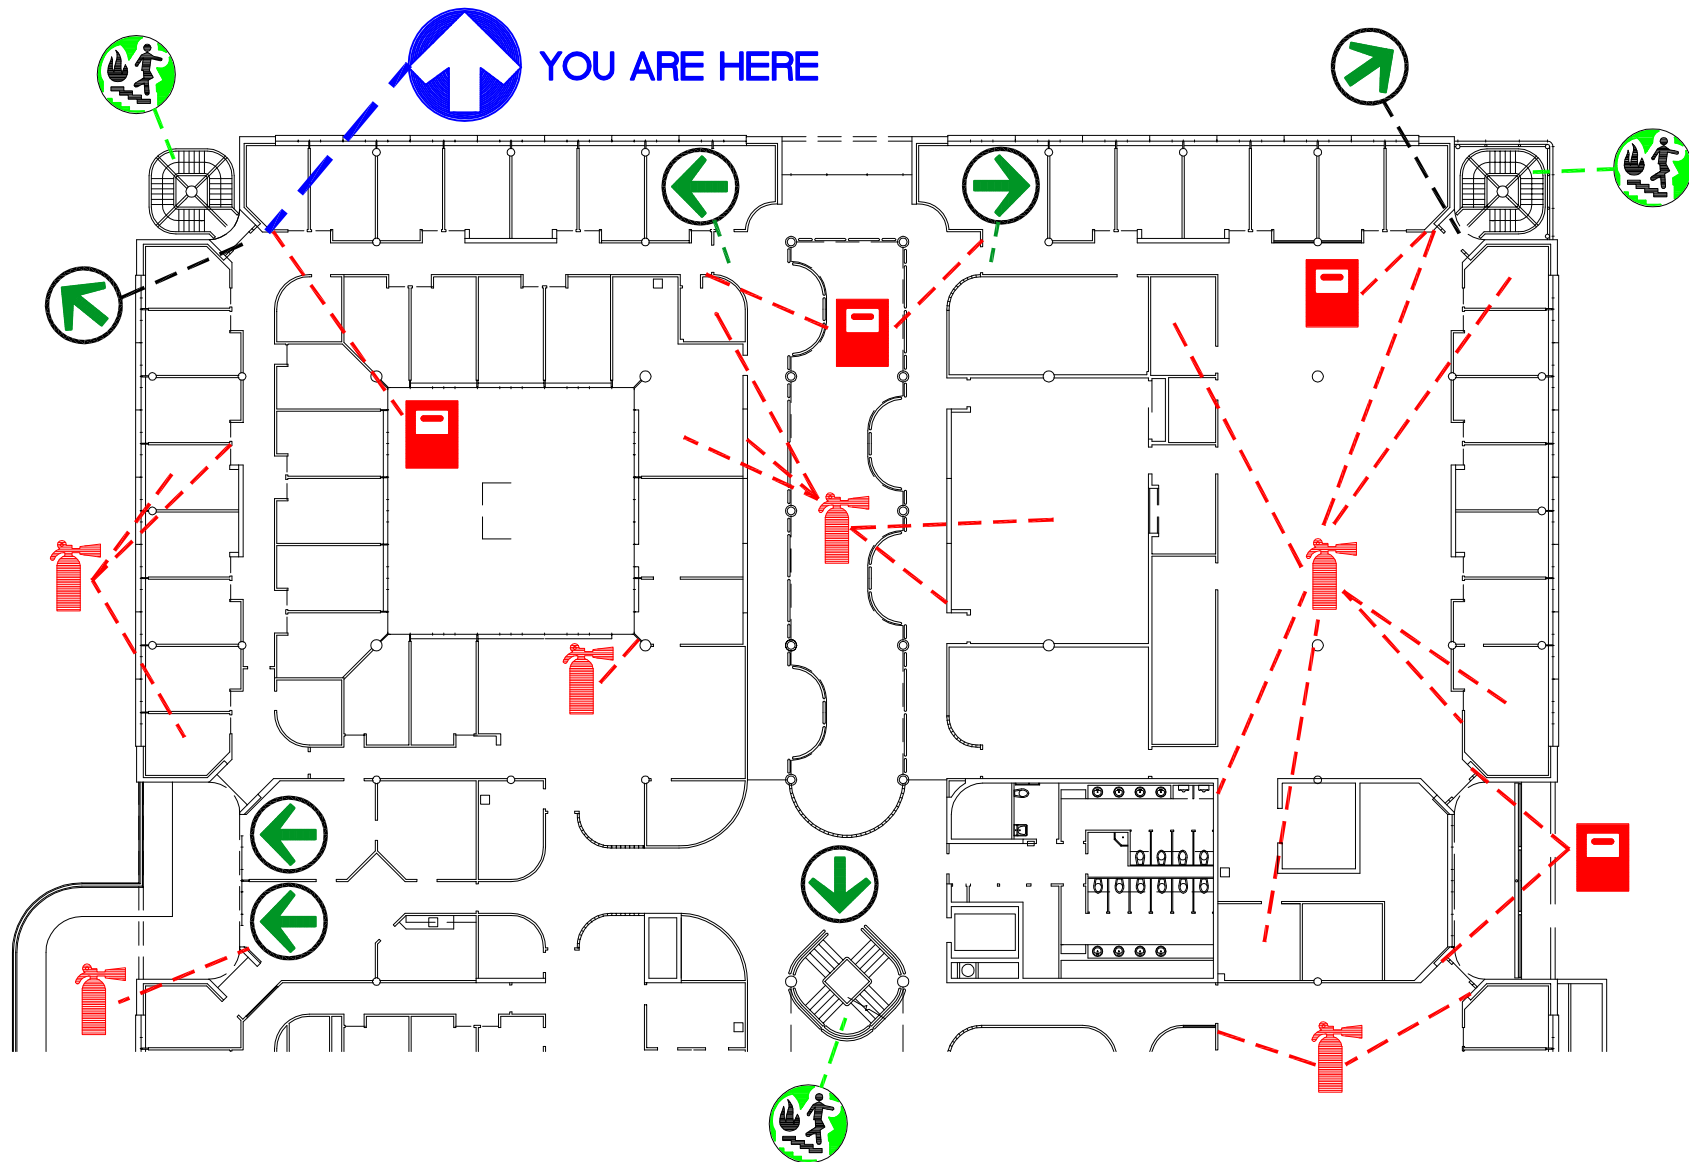



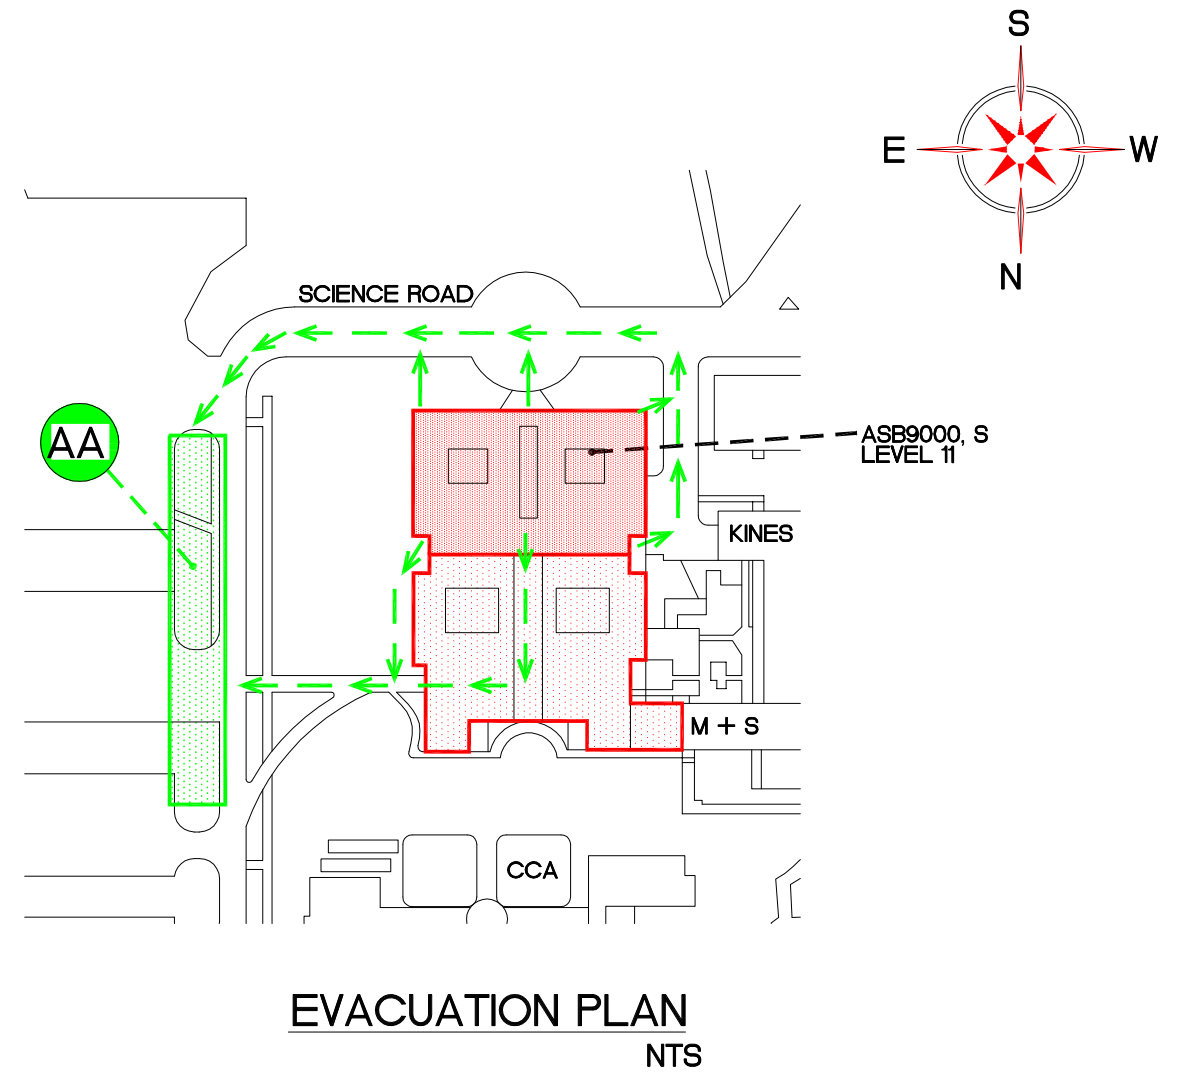






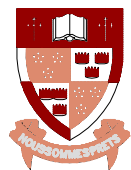
ASB9000 FLOOR PLAN (SOUTH)
LEVEL 11
NTS



EVACUATION PLAN
NTS

LEGEND


-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA
-  SPRINKLER SHUT OFF




SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP038090S_5.DWG

99-01-29

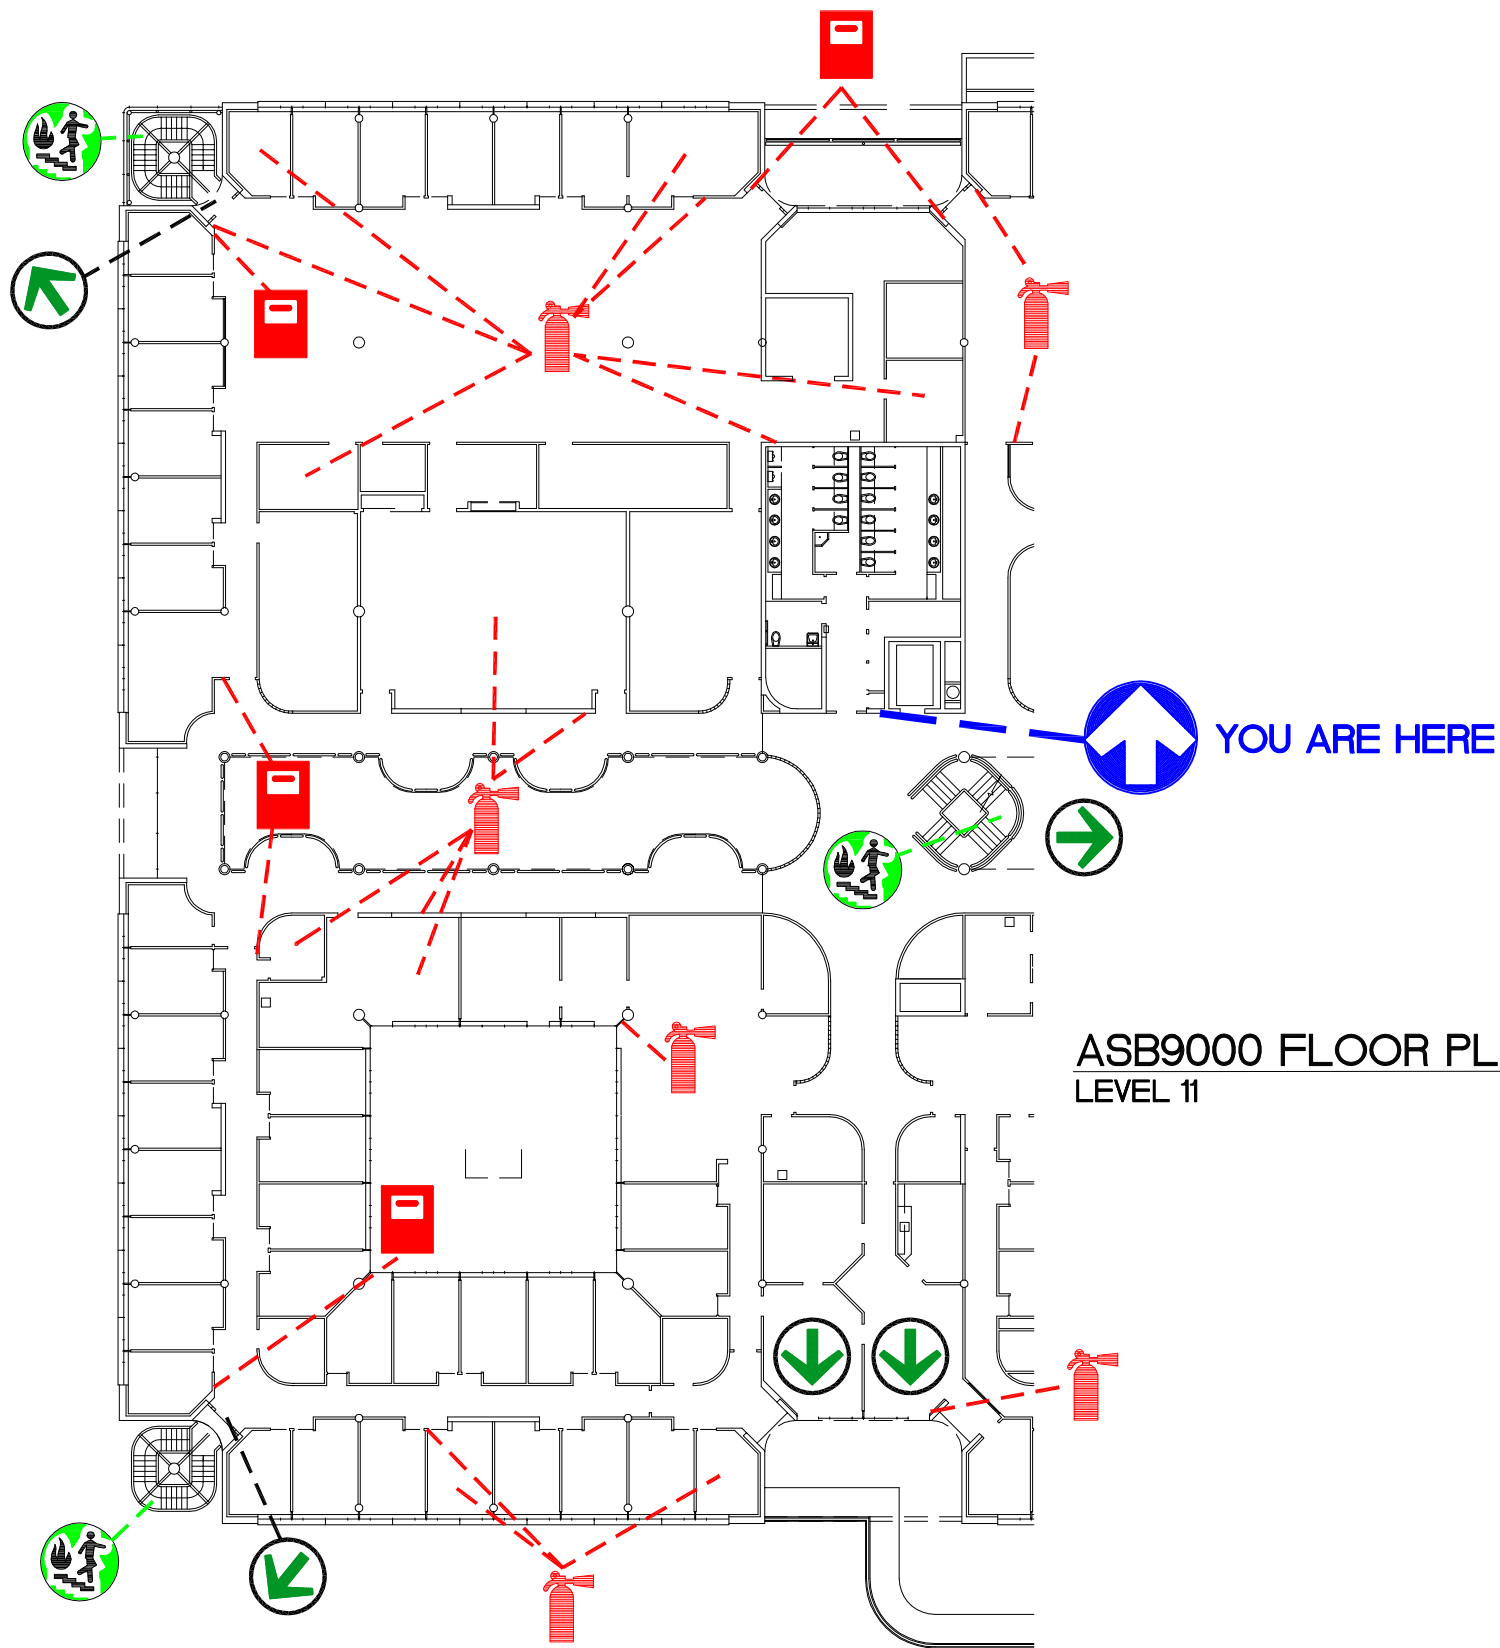



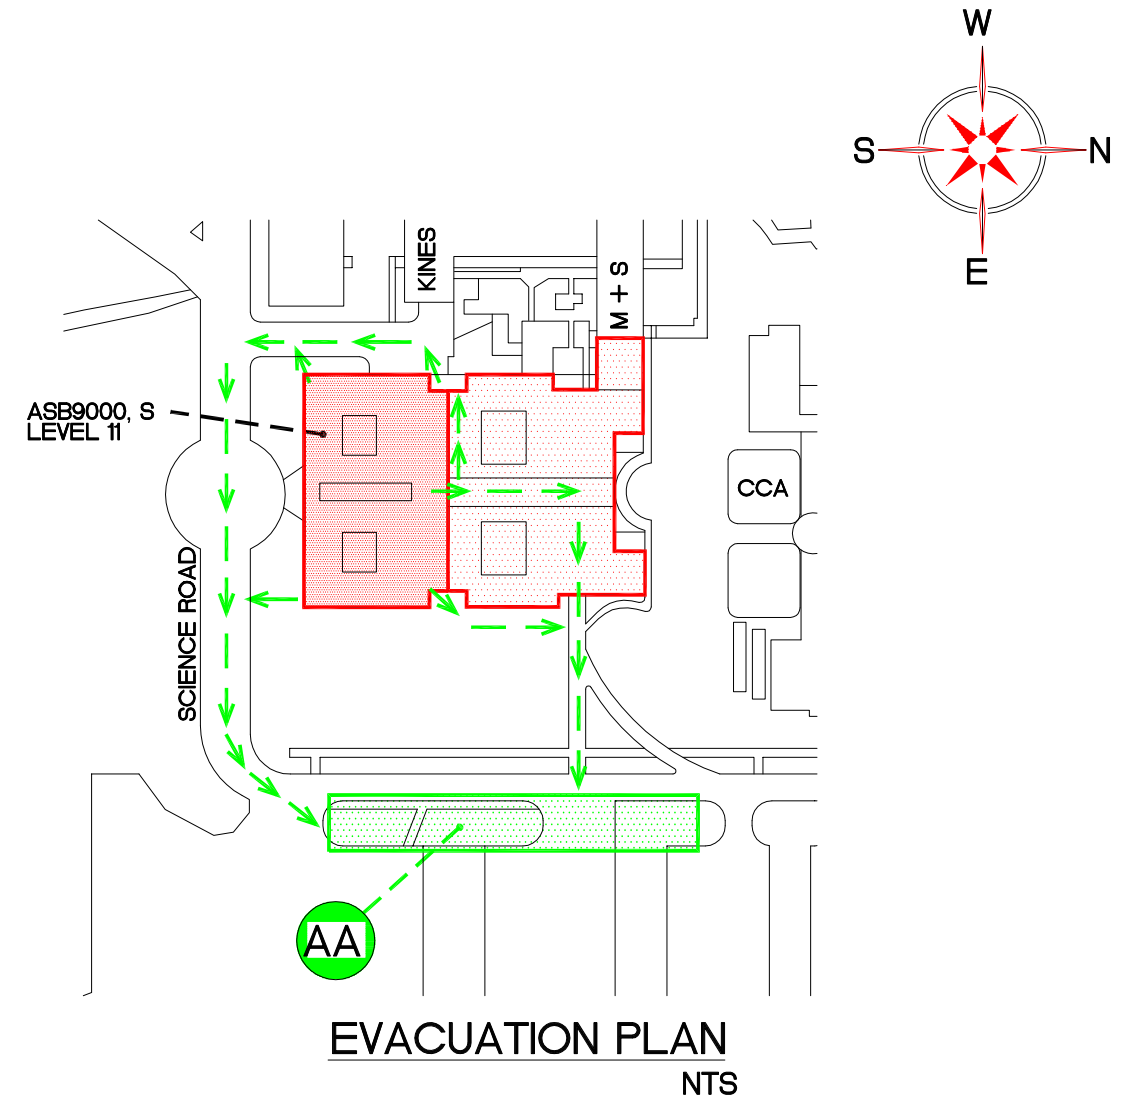






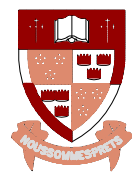
ASB9000 FLOOR PLAN (SOUTH)
LEVEL 11
NTS



EVACUATION PLAN
NTS

LEGEND


-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA
-  SPRINKLER SHUT OFF




**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**

SFUDWGS\EVACPLAN\EP38090S_6.DWG


99-01-29

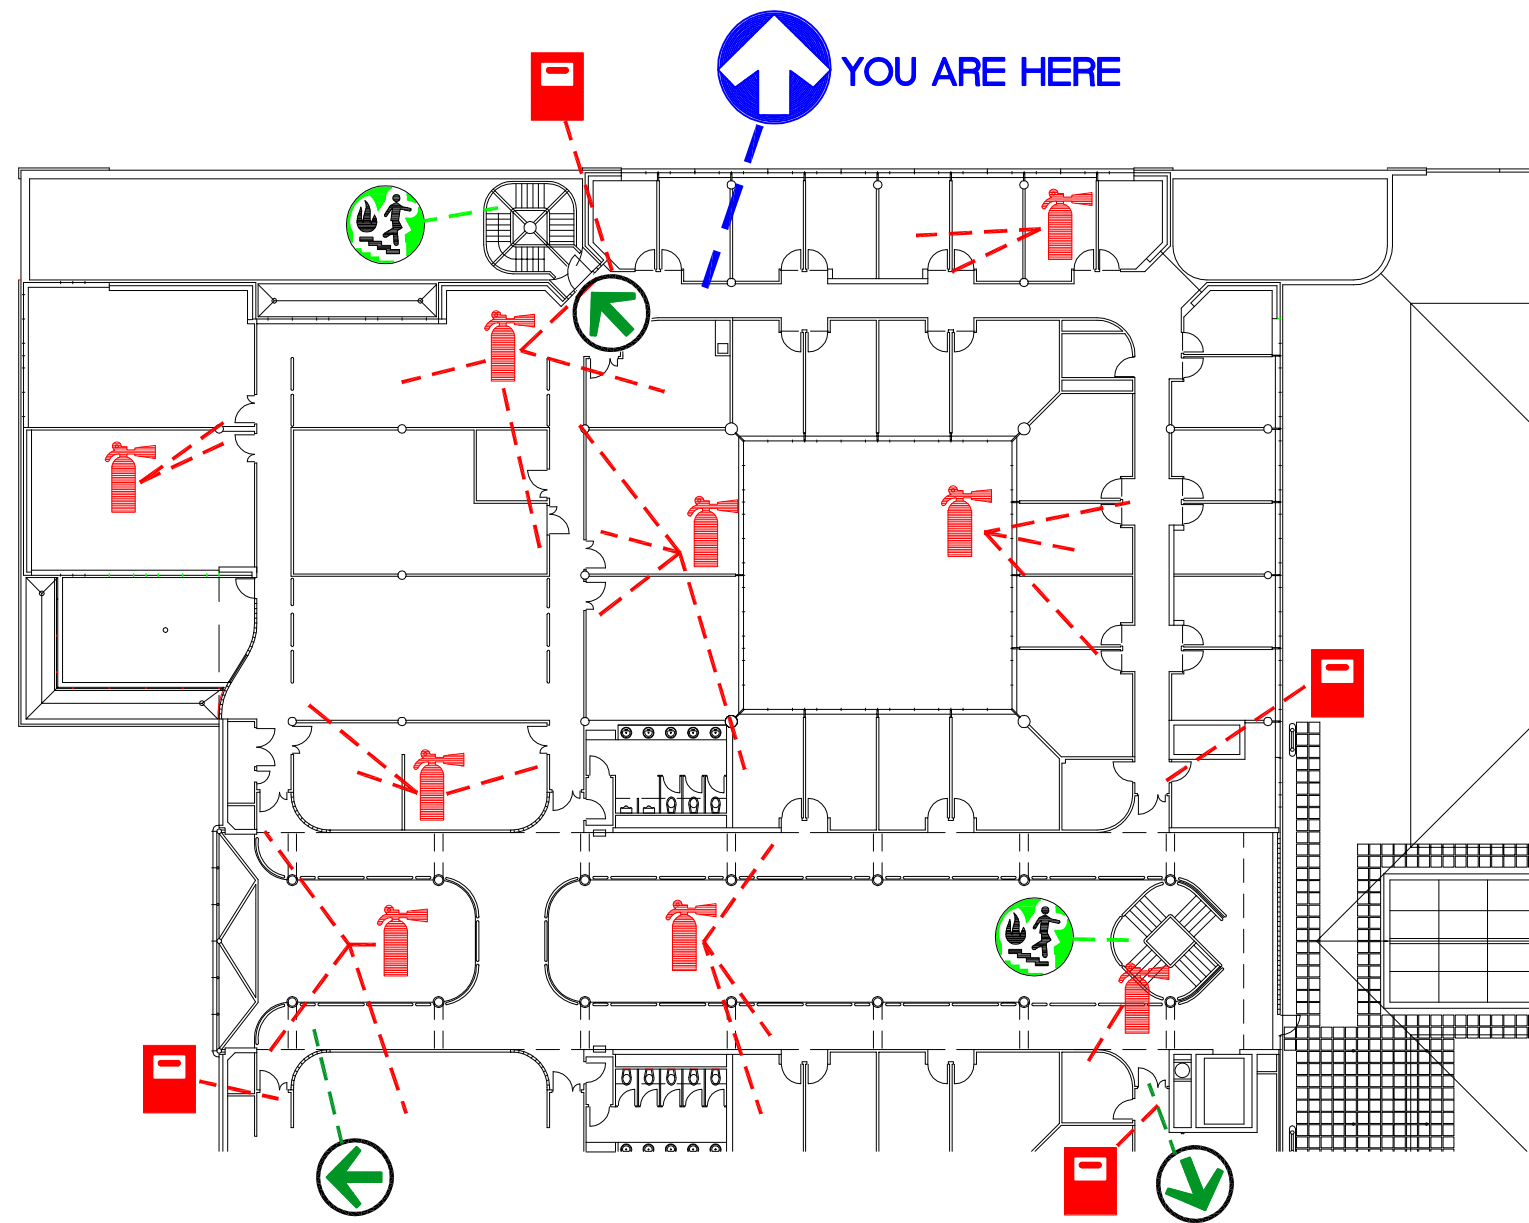

ASB10000 FLOOR PLAN (NE)
LEVEL 12
NTS

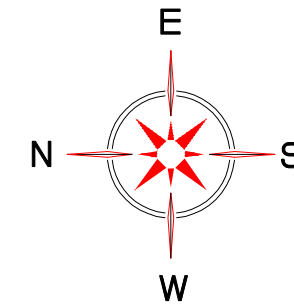



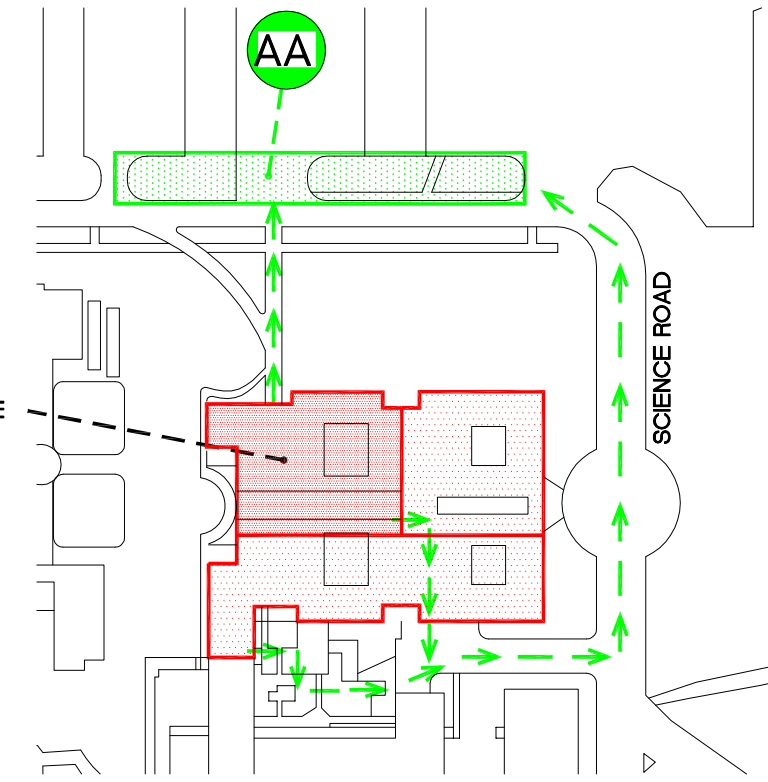






ASB10000, NE
LEVEL 12



EVACUATION PLAN
NTS



LEGEND

-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  SPRINKLER SHUT OFF
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA




**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**

SFUDWGS\EVACPLAN\EP03810NE_1.DWG

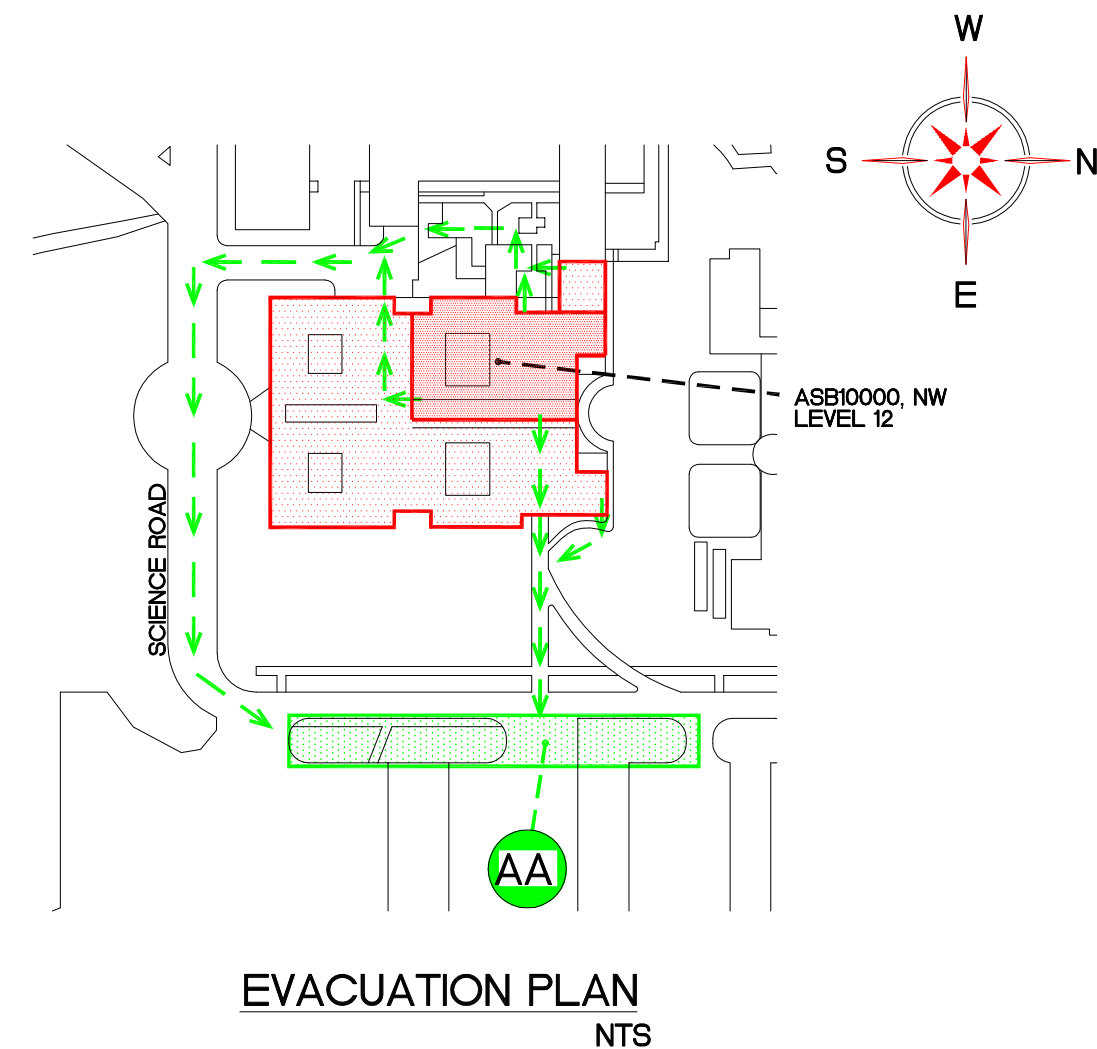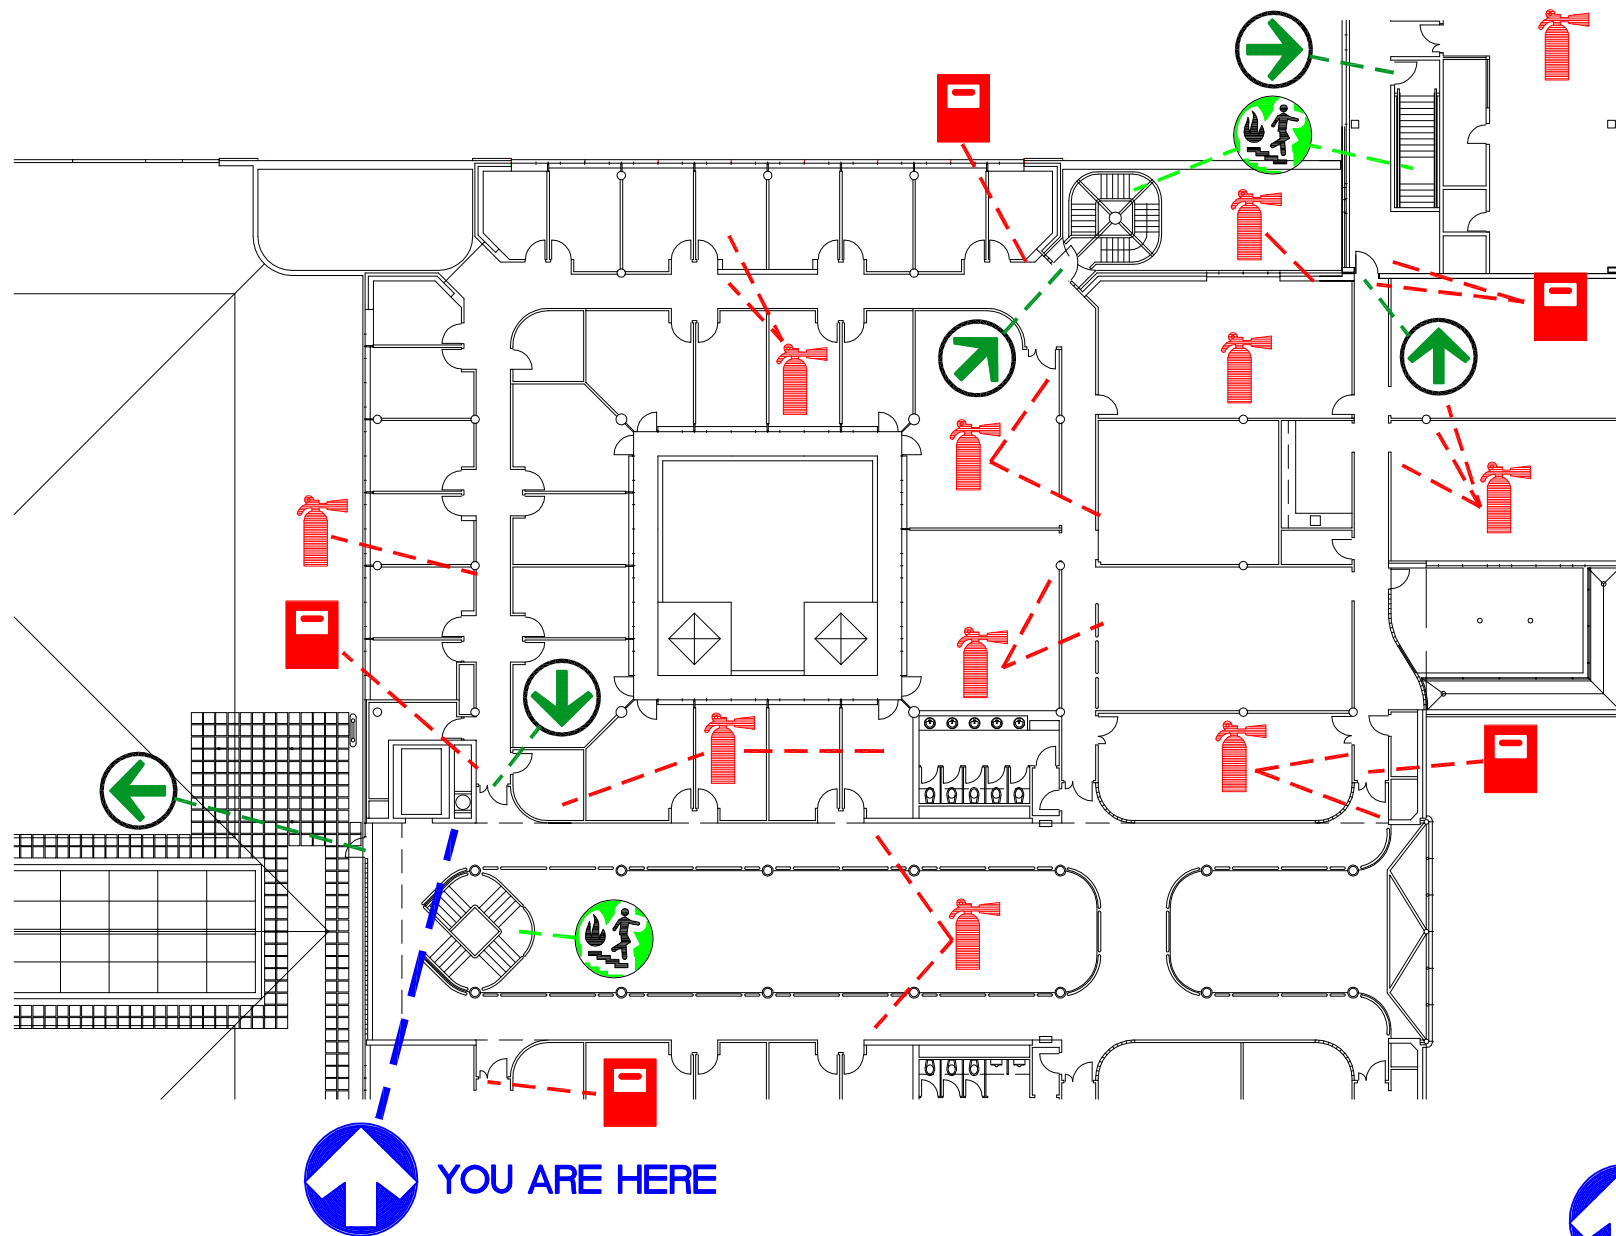


LEGEND

- YOU ARE HERE
- EXIT POINT
- FIRE EXTINGUISHER
- FIRE HOSE
- FIRE PULL STATION
- FIRE STAIRS
- SPRINKLER SHUT OFF
- EVACUATION ROUTE
- ASSEMBLY AREA

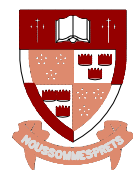


**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**

SFUDWGS\EVACPLAN\EP03810NW_3.DWG

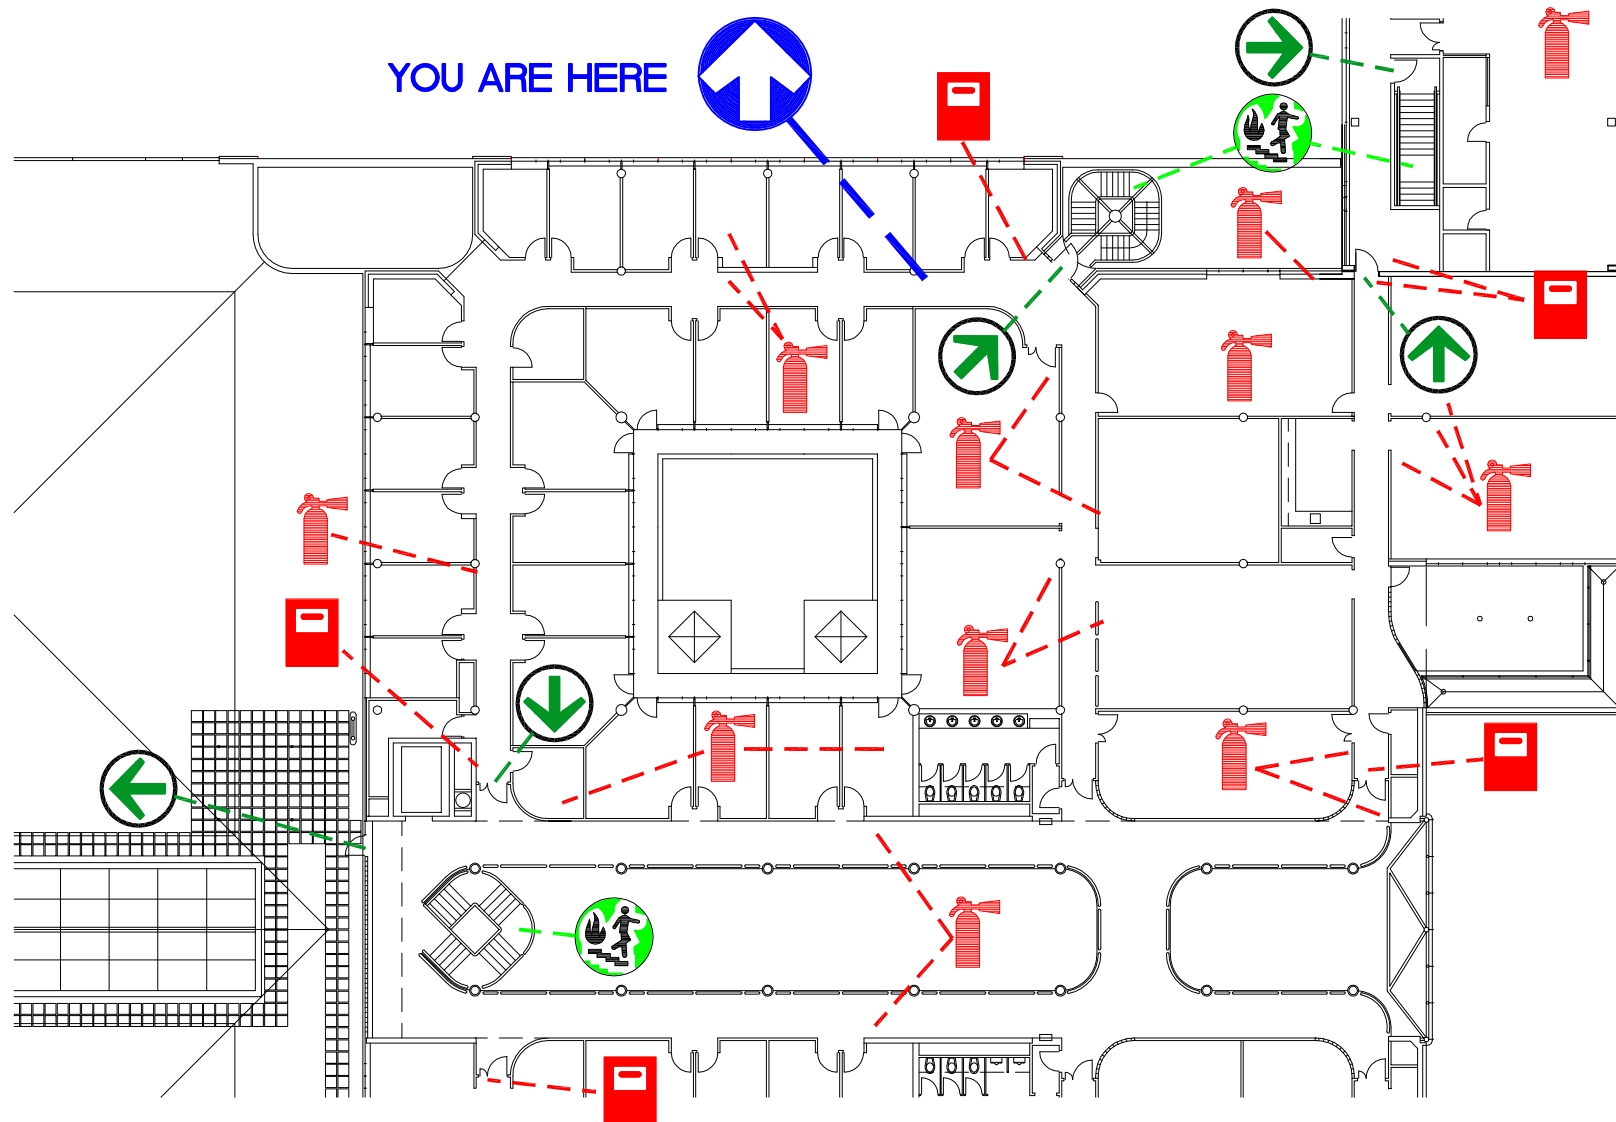




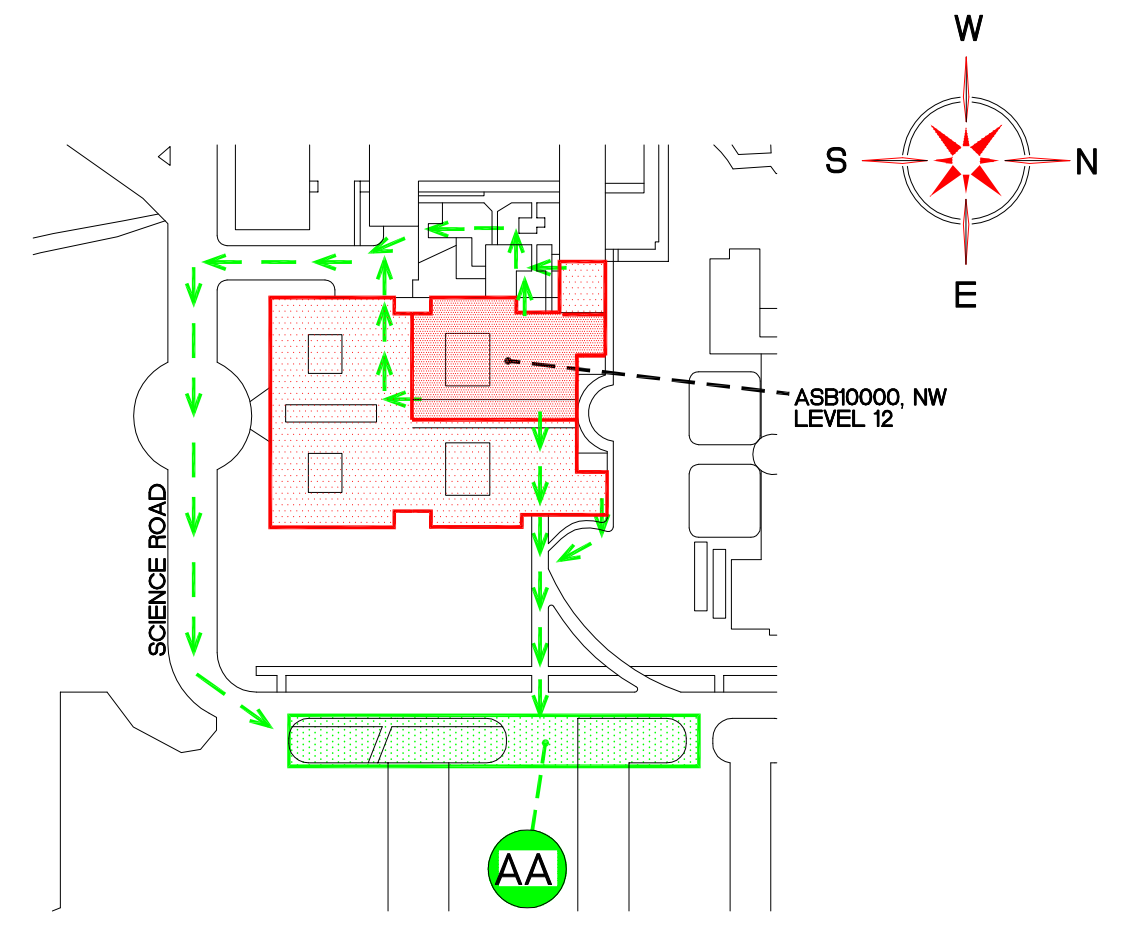






ASB10000 FLOOR PLAN (NW)
LEVEL 12
NTS

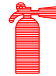

EVACUATION PLAN
NTS


LEGEND

-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  SPRINKLER SHUT OFF
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA

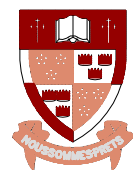


**SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING**


SFUDWGS\EVACPLAN\EP03810NW_4.DWG

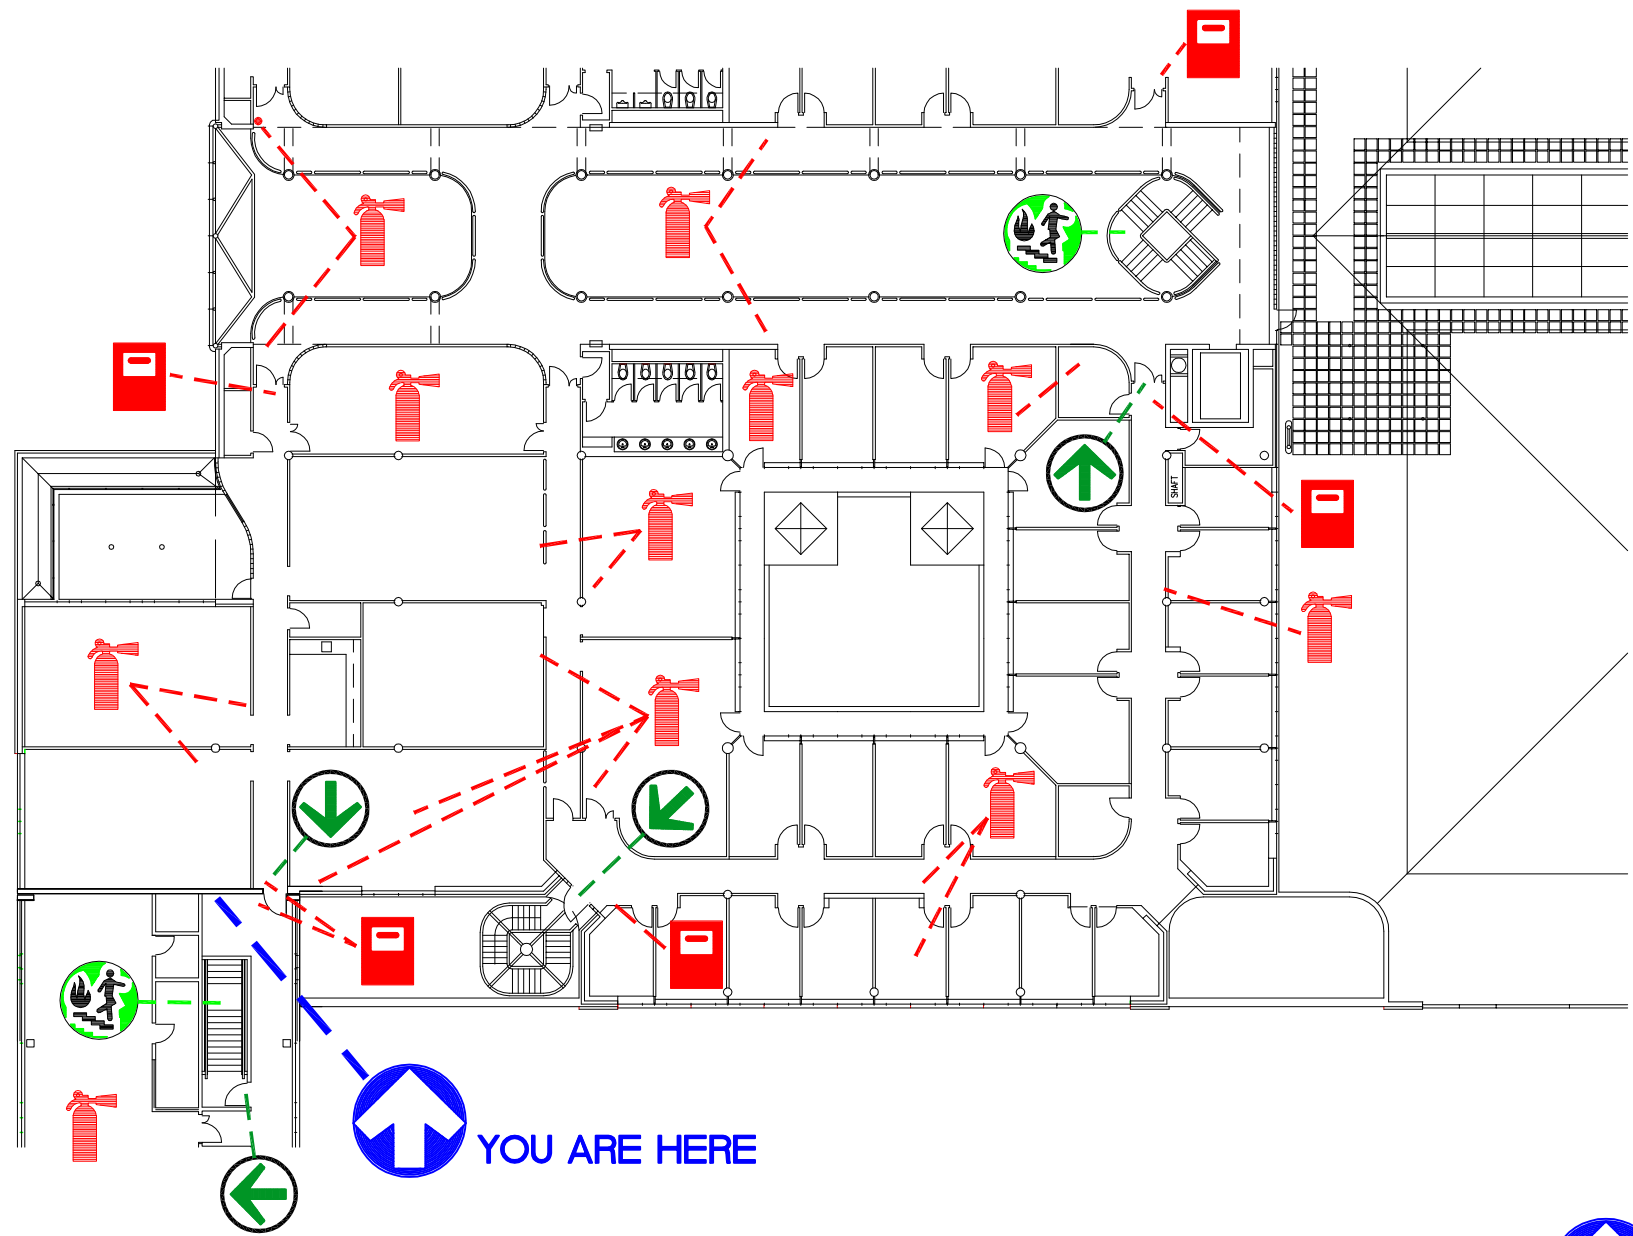



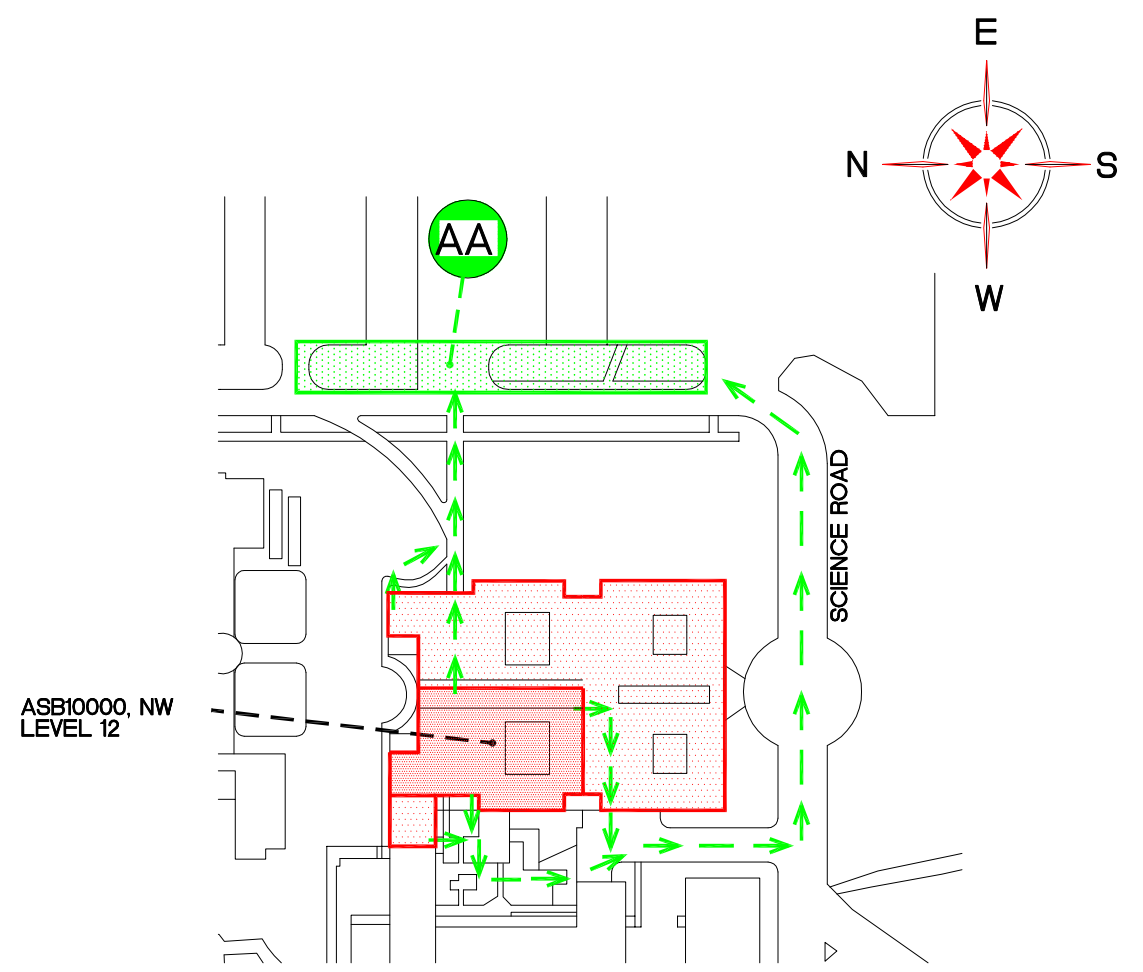



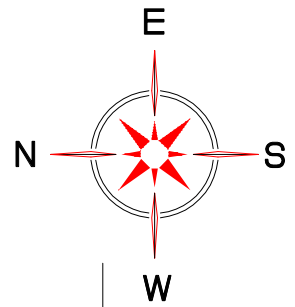


ASB10000 FLOOR PLAN (NW)
LEVEL 12
NTS




EVACUATION PLAN
NTS



LEGEND

-  YOU ARE HERE
-  EXIT POINT
-  FIRE EXTINGUISHER
-  FIRE HOSE
-  SPRINKLER SHUT OFF
-  FIRE PULL STATION
-  FIRE STAIRS
-  EVACUATION ROUTE
-  ASSEMBLY AREA

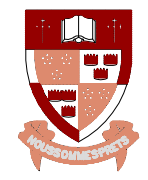

SIMON FRASER UNIVERSITY
APPLIED SCIENCE BUILDING

SFUDWGS\EVACPLAN\EP03810NW_5.DWG